


OPERATING INSTRUCTIONS

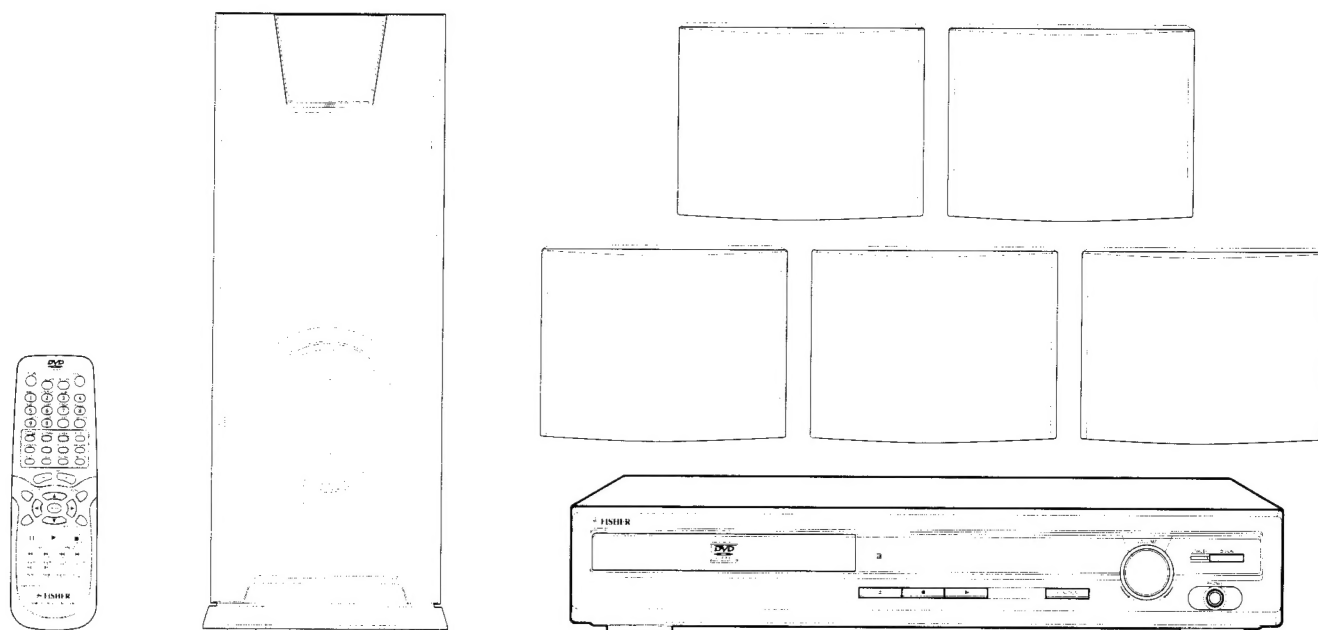

DCS-TS750

DVD Home Theater System



FISHER'S HELP-LINE

Call the toll-free number below if you have any difficulties operating this product.
1-800-421-5013 (weekdays 8:00 AM - 5:00 PM, Pacific time)

CONTENTS

Accessories	E2	Angle Replay	E22
Safety Certification	E3	Normal Repeat Playback	E23
For Safe and Efficient Operation	E3	Designated Range Repeat Playback	E23
Controls	E4	Programmed Playback [CD]	E24
Multi-Brand TV Remote Control	E5	Selecting Subtitle Language [DVD]	E25
Basic Connections	E7	Selecting Audio Soundtrack Language (Multi-Language) [DVD]	E25
Speaker Connections	E7	Selecting On-Screen Information	E26
Speaker Placement	E8	Selecting Picture Mode	E26
TV Connections	E9	MP3 CD Operation	E27
Antenna Connections	E11	MP3 CD Information	E27
Additional Connection Examples	E11	MP3 CD Playback	E27
Power Supply (Main Unit and Active Subwoofer)	E12	Stopping Playback	E28
Adjusting the Clock	E12	Pause	E28
Before Operation	E13	File Skip	E28
Common Operation	E13	Repeat Playback	E28
Selecting the Surround Mode	E14	TVGuardian Operation	E29
Adjusting the Speaker Volume Balance	E15	Before Setting	E29
Adjusting the Subwoofer Level	E15	Setting TVGuardian	E29
Phase Switch of the Subwoofer	E15	How It Works After Setting TVGuardian	E30
Playable Discs	E16	Initial Settings	E31
Disc Playback	E17	Setting Language	E31
Preparations	E17	Setting Display	E31
Basic Playback	E17	Setting Audio	E32
Stopping Playback	E18	Setting Parental	E33
Continuing Playback from Where You Stopped Watching (LAST MEMO PLAY), for DVD only	E18	Language Code List	E34
Chapter (Track) Skip	E18	Enjoying Video Sources	E35
Selecting a DVD Menu	E19	Listening to the Radio	E35
Selecting a Title Menu [DVD]	E19	Automatic/Manual Tuning	E35
Title Search [DVD]	E20	To Preset Stations	E35
Chapter Search [DVD]	E20	Listening to Preset Stations	E36
Time Search [DVD]	E20	Timer Operation	E37
Time Search [CD]	E20	Using the Wake Up Timer	E37
Track Search [CD]	E20	Using the Sleep Timer	E38
Fast Playback	E21	Maintenance	E38
Slow Motion Playback [DVD]	E21	Troubleshooting Guide	E39
Still Picture (Pause)	E21	Specifications	E40
Frame by Frame Advance Playback [DVD]	E21	Warranty	E41
Picture Zoom [DVD]	E22		
Viewing from a Desired Camera Angle (Multi-Angle) [DVD]	E22		

Please Read This Manual.

Because DVD is a new technology, we recommend that you read this manual carefully before connecting your DVD Home Theater System and operating it for the first time.
Keep the manual in a safe place for future reference.

IMPORTANT INFORMATION:

To connect this DVD Home Theater System to a TV, TV must have a Video input jack (RCA-type) at least. You cannot connect it to an antenna terminal of TV.

To operate the built-in TVGuardian®

This unit has the built-in TVGuardian® Foul Language Filter (TVG®).

When a disc supporting closed caption is played, it will mute the audio during the entire phrase containing offensive language. For more details, see page E29.

 


CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

 


This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.


WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

WARNING: UNAUTHORIZED RECORDING OF COPYRIGHTED MATERIAL MAY VIOLATE APPLICABLE COPYRIGHT LAWS. THE MANUFACTURER ASSUMES NO RESPONSIBILITY FOR UNAUTHORIZED DUPLICATION, USE OR OTHER ACTS WHICH INFRINGE UPON THE RIGHTS OF COPYRIGHT OWNERS.


ACCESSORIES




REM-TS750MT wireless remote control

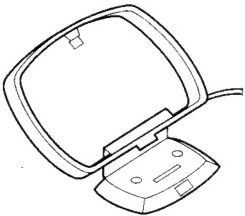


AM loop antenna

 


FM indoor antenna lead wire

 


Video cable

 

 
Front right speaker cable
Length: Approx. 23 feet (7 meters)
(Black and Red)



 
Front left speaker cable
Length: Approx. 23 feet (7 meters)
(Black and Blue)



 
Front center speaker cable
Length: Approx. 23 feet (7 meters)
(Black and Green)



 Surround right speaker cable
Length: Approx. 23 feet (7 meters)
(Black and Orange)



 Surround left speaker cable
Length: Approx. 23 feet (7 meters)
(Black and Gray)



Subwoofer cable with RCA-type plug
Length: Approx. 23 feet (7 meters)
(Black and Brown)

SAFETY CERTIFICATION

This unit is made and tested to meet exacting safety standards. It meets UL and FCC requirements and complies with safety performance standards of the U.S. Department of Health and Human Services.

CAUTION - USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

THIS UNIT SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT PROPERLY QUALIFIED SERVICE PERSONNEL.

FCC INFORMATION

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION:

Changes or modifications not expressly approved by Fisher may void the user's authority to operate this equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FOR SAFE AND EFFICIENT OPERATION

- Do not damage the power cord.
- When not in use, disconnect the power cord from the outlet. Grasp the plug, not the cord, when disconnecting the unit.
- If water should enter the unit, electrical shock or a malfunction may result. Use in an area where there is low humidity and little dust.
- Do not disassemble or alter the unit in any way.
- Do not use the unit in areas where extremes in temperature occur (below 40°F (5°C) or exceeding 95°F (35°C)), or where it may be exposed to direct sunlight.
- Because of the DVD video player extremely low noise and wide dynamic range, there is a tendency to set the volume on the amplifier higher than necessary. Doing so may produce an excessively high output from the amplifier which can cause damage to your speakers. Please be careful in this regard.
- Sudden changes in the surrounding temperature can cause dew to form on the optical pickup lens inside the unit. Under this condition the unit may be unable to operate properly. If this should occur, remove the disc and allow the unit to adjust to the surrounding temperature.
- **When carrying the unit, be sure to remove a disc which may be inside and turn the power off. Then unplug the power cord from the AC outlet after 10 seconds. Carrying the unit with a disc inside may damage the disc and/or the unit.**

CAUTION:

Placing the unit in a well ventilated area is strongly recommended.

Do not place any object on the top of the unit.

Do not block ventilation holes.

The cabinet of the unit warms up when it is used for a long time, but it is not a malfunction.

Press **[▲]** on the unit (or **[OPEN/CLOSE]** on the remote control) when closing the disc tray. Do not push the disc tray.

WHAT TO DO IF...

 
If the operation of the unit or display is not normal, even though the appropriate buttons have been pressed.

1. Disconnect the power cord.
2. Press **[RESET]** (bottom of the unit) for at least 20 seconds.
3. Connect the power cord again.
4. Press the desired function button.


Note:

If the unit still does not operate correctly, please contact your nearest Fisher Authorized Service Facility.

○
RESET




CONTROLS

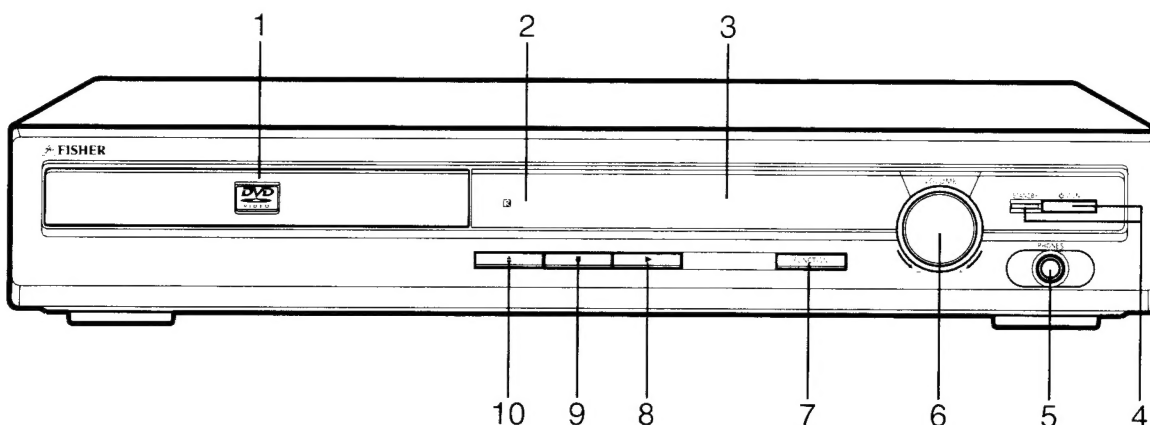

- | | |
|---|-------------------------------|
| 1. Disc tray | 6. Volume control (VOLUME) |
| 2. Remote sensor (IR) | 7. Function button (FUNCTION) |
| 3. FL display | 8. Play button (▶) |
| 4. Power button/Standby indicator (STANDBY, ⏻/ON) | 9. Stop button (■) |
| 5. Headphone jack (PHONES) | 10. Open/Close button (⏮) |

FL display

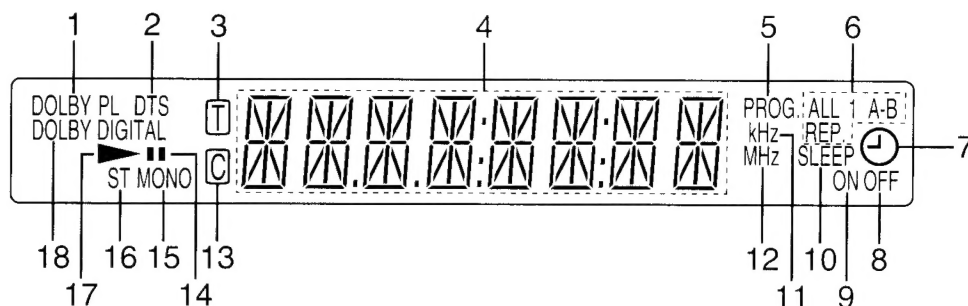



- | | |
|---|---|
| 1. Dolby Pro Logic indicator (DOLBY PL) | 11. Kilohertz indicator (kHz) |
| 2. *DTS indicator (DTS) | 12. Megahertz indicator (MHz) |
| 3. Title and Track indicator (T) | 13. Chapter indicator (C) |
| 4. Message or number indicators
(Title, chapter, track, playing time or other information) | 14. Pause indicator () |
| 5. Program indicator (PROG.) | 15. FM mono indicator (MONO) |
| 6. Repeat mode indicators (ALL, 1, A-B, REP.) | 16. FM stereo indicator (ST) |
| 7. Timer indicator (⌚) | 17. Play indicator (▶) |
| 8. Timer off indicator (OFF) | 18. Dolby Digital indicator (DOLBY DIGITAL) |
| 9. Timer on indicator (ON) | |
| 10. Sleep indicator (SLEEP) | |

* DVD video disc with DTS may not work correctly. You can see the picture on the TV screen, but there is no sound.

"DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

Manufactured under license from Dolby Laboratories.
"Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories.

MULTI-BRAND TV REMOTE CONTROL

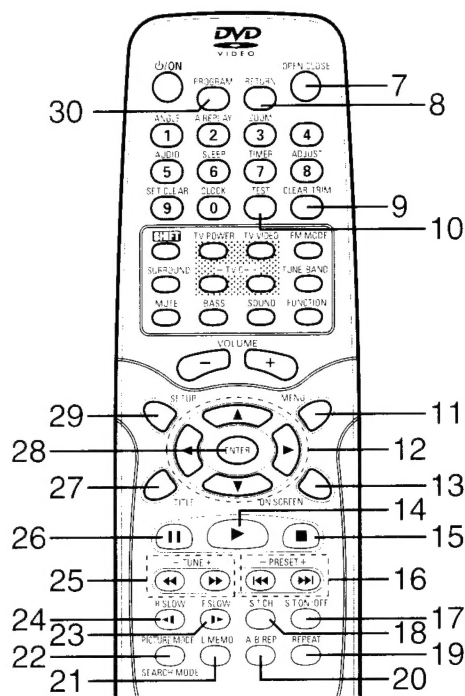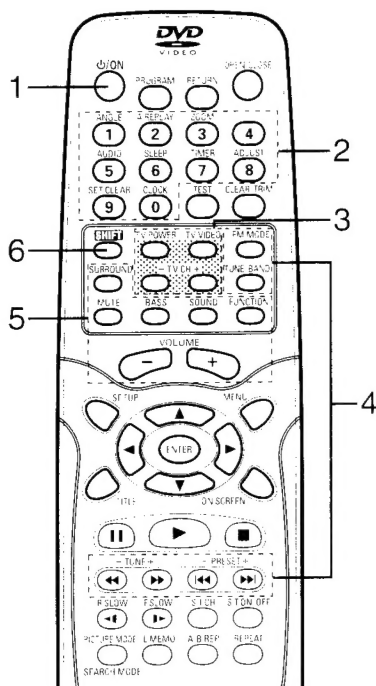

1. Power button (ON/OFF)

2. Number and other function buttons

These buttons are used as number buttons and as function buttons of each name.

- When using as a number button, press the appropriate button directly.
- When using as a function button of each name, press the appropriate button while holding the SHIFT button down.

Number buttons (1 – 9, 0)

Angle button (ANGLE)

Angle replay button (A.REPLAY)

Zoom button (ZOOM)

Audio button (AUDIO)

Sleep button (SLEEP)

Timer button (TIMER)

Adjust button (ADJUST)

Set/Clear button (SET/CLEAR)

Clock button (CLOCK)

3. TV control buttons

Power button (TV POWER)

TV/VIDEO select button (TV/VIDEO)

Channel scanning buttons (-TV CH +)

4. Tuner controls

FM mode button (FM MODE)

Tuner function/Band select button (TUNE/BAND)

Tuning buttons (- TUNE +)

Preset tuning buttons (- PRESET +)

5. Amplifier controls

Surround button (SURROUND)

Muting button (MUTE)

Bass button (BASS)

Sound preset button (SOUND)

Function button (FUNCTION)

Volume buttons (- VOLUME +)

6. Shift button (SHIFT)

7. Open/Close button (OPEN/CLOSE)

8. Return button (RETURN) (See page E28.)

9. Clear/Trim button (CLEAR, TRIM)

Note:

At Trimming mode, press the button while holding the SHIFT button down. (See page E15.)

10. Test tone button (TEST) (See page E15.)

11. Menu button (MENU)

12. Directional arrow buttons (▲, ▼, ◀, ▶)

13. On-screen display button (ON SCREEN)

14. Play button (▶)

15. Stop button (■)

16. Skip/Next/Previous buttons (◀◀, ▶▶)

Note:

This button is also used at the clock setting.

17. Subtitle On/Off button (S.T.ON/OFF)

18. Subtitle change button (S.T.CH)

19. Repeat button (REPEAT)

20. A-B repeat button (A-B REP)

21. Last memory button (LAST MEMO)

22. Picture mode/Search mode button (PICTURE MODE/SERACH MODE)

Note:

At Search mode, press the button while holding the SHIFT button down.

23. Forward slow button (I ▶)

24. Reverse slow button (◀ I)

25. Fast forward/Fast reverse buttons (◀◀, ▶▶)

26. Pause/Step button (II)


27. Title button (TITLE)

28. Enter button (ENTER)

29. Setup button (SETUP)

30. Program button (PROGRAM)

Inserting batteries

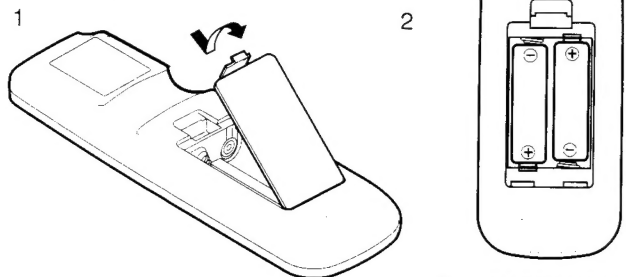

Two "AA" batteries
(not supplied)


Note:

Remove the batteries if the remote control is not to be used for a month or more. Batteries left in the unit may leak and cause damage.

IMPORTANT NOTE:

SPENT OR DISCHARGED BATTERIES MUST BE RECYCLED OR DISPOSED OF PROPERLY IN COMPLIANCE WITH ALL APPLICABLE LAWS. FOR DETAILED INFORMATION, CONTACT YOUR LOCAL COUNTY SOLID WASTE AUTHORITY.

Remote control range

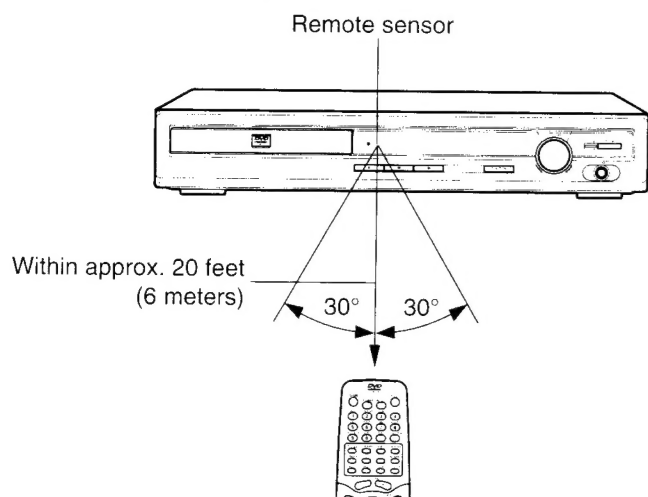

To set the remote control code for TV

This remote control can operate the basic functions of TVs made by the manufacturers listed below.

To enter the remote control code for your brand of TV, follow the steps below.

1. In the chart below, find the code corresponding to your brand of TV.
2. While holding down [TV POWER], enter the 2-digit code using the number buttons [0 - 9], then release [TV POWER].
 - The remote control is now set to operate your TV.

TV brands	Code
ADMIRAL	05, 10, 13
EMERSON	17
FISHER	03
GE	07
GOLD STAR	01
HITACHI	02
JVC	15
MAGNAVOX	08
MATSUSHITA	12, 18
MITSUBISHI	14
PANASONIC	12, 18
QUASAR	12, 18
RCA	06
SAMSUNG	16
SANYO	03
SHARP	00, 13
SONY	11
TECHNOL ACE	05
TOSHIBA	04
ZENITH	09, 10

Notes:

- Only remote-controlled TVs can be operated using this remote control. (Refer to your TV instruction manual for more details.)
- There may be some older TV models that cannot be operated with this remote control. If this is the case, use the original remote control supplied with the TV.

IMPORTANT NOTE:

If the batteries in the remote control are changed, the code settings for the TV must be re-entered.

Write your code number below for future reference.

TV:

BASIC CONNECTIONS


Note:

Do not connect the power cord to a 120V AC 60 Hz outlet until all connections have been made.

Speaker Connections

To achieve proper stereo reproduction, connect the speaker wires without shorting to adjacent wires as shown below.


Speaker Wire Color	Use
Black and Red	Front right speaker
Black and Blue	Front left speaker
Black and Green	Center speaker
Black and Orange	Surround right speaker
Black and Gray	Surround left speaker
Black and Brown (with RCA-type plug)	Subwoofer

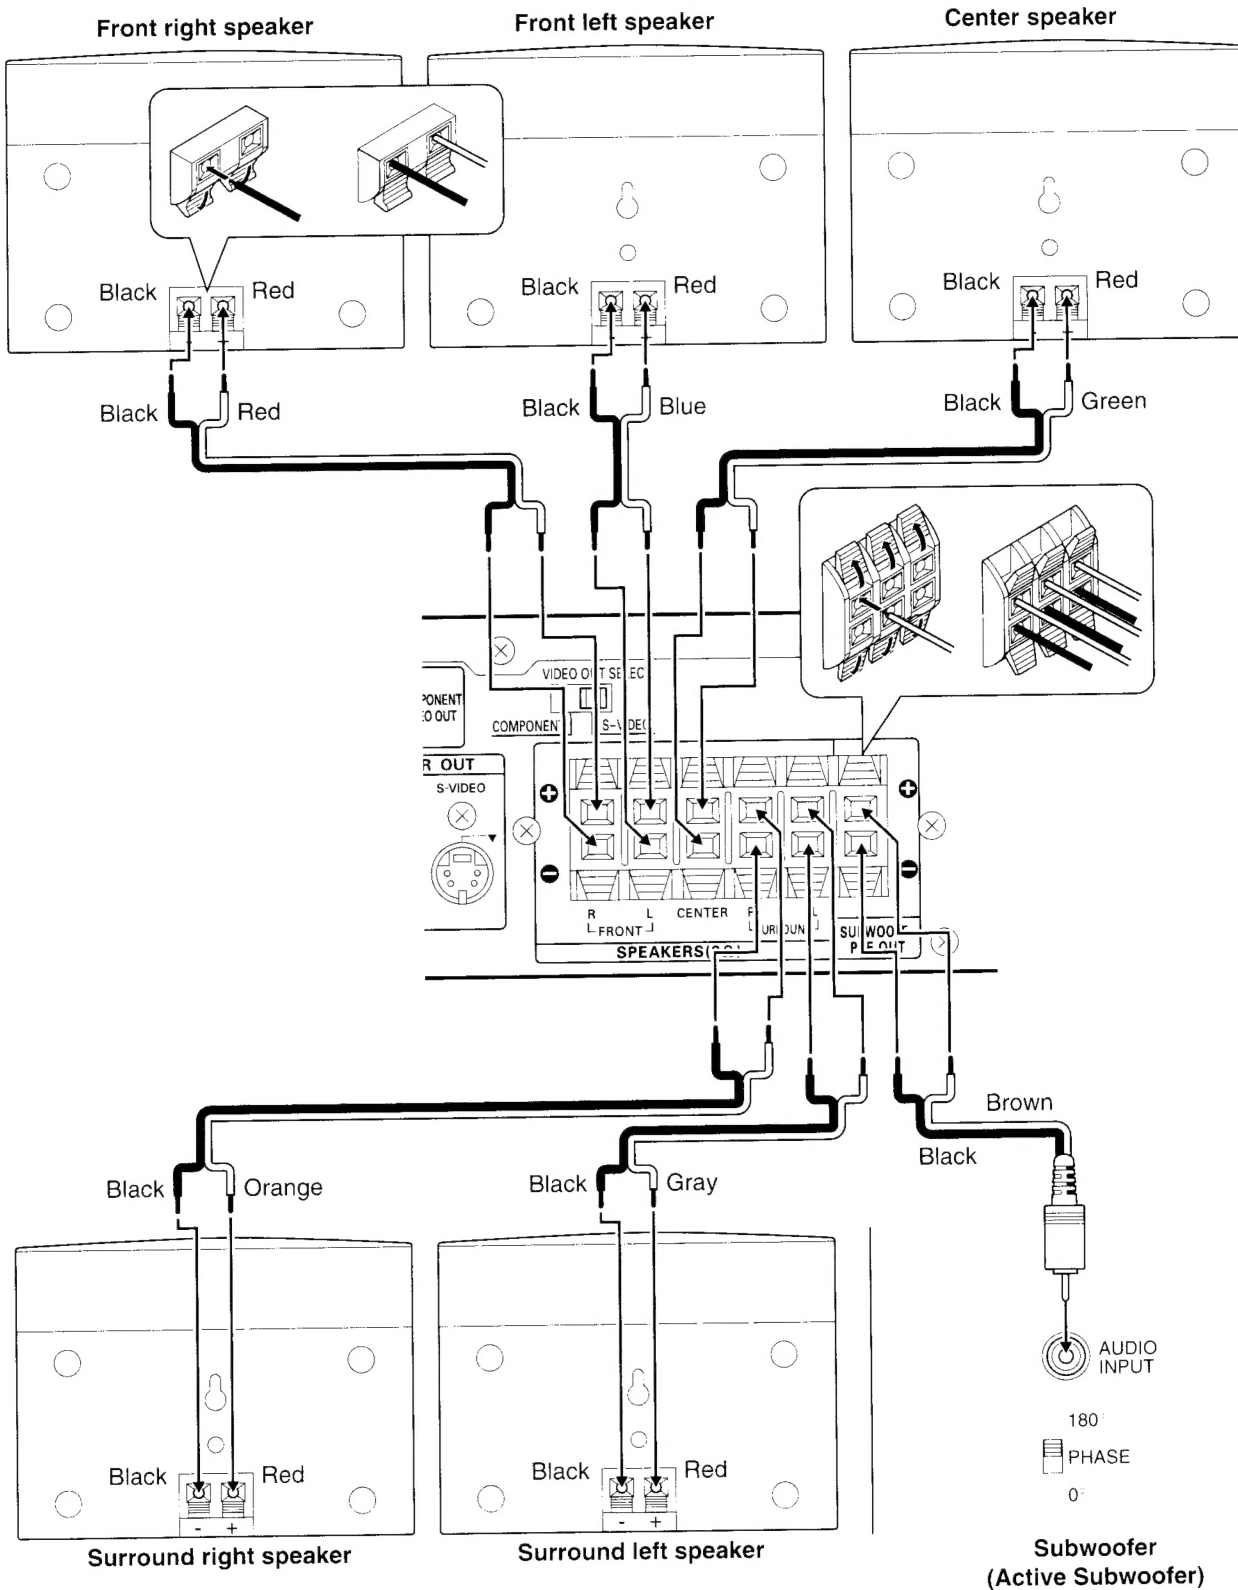

Speaker Placement



**Need help? Call
1-800-421-5013**

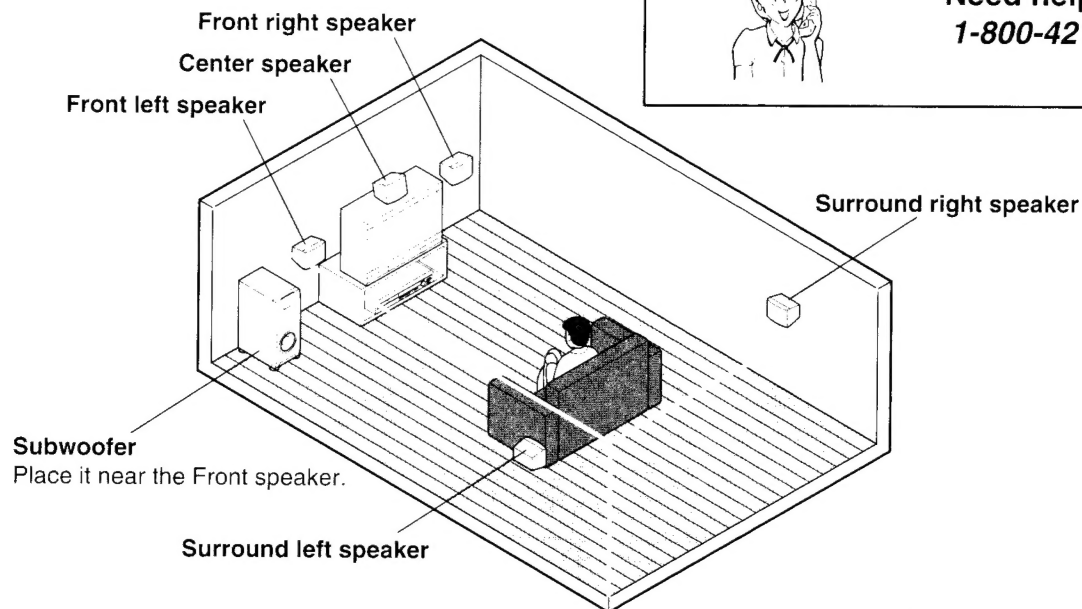

The supplied speakers have built-in magnetic stray field compensation. They may be placed close to a TV without affecting the color purity.

The five speakers are all the same and can be used for Front left, Center, Front right, Surround left, and Surround right speakers.


The front, center, and surround speakers should be placed at approximately the same distance from the listening position.

Place the front left and right speakers either side of the TV.

Place the center speaker directly above the TV.

Place the surround speakers either sides of the listening position, or slightly to the rear, approximately 2 feet ~ 3 feet 3 inches (60 cm ~ 1 meter) higher than ear level.


The subwoofer can be placed near the front speaker and not too far from the TV.

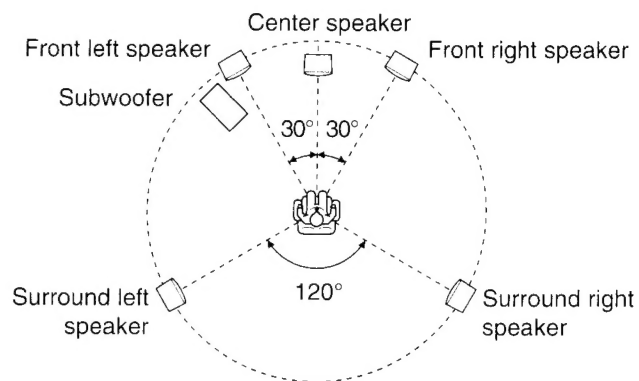


Notes:

- The angles in the diagram are approximate.
- Please refer to "Setting Audio" on page E32.

Example: To hang the speaker on a wall

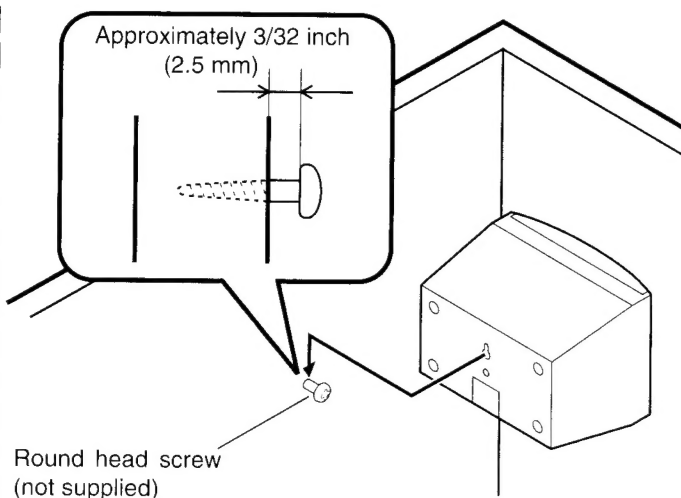

Example: To mount the speaker with a stand

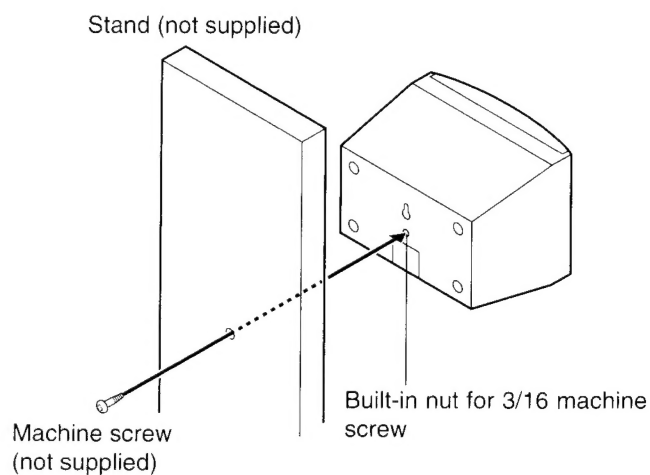

Note: Be careful of dropping the speaker system, it might cause damage or serious injuries.


TV Connections

Using MONITOR OUT VIDEO jack

Connect the Video cable with yellow connectors (supplied) between the MONITOR OUT VIDEO jack of the unit and the VIDEO INPUT jack on the TV.

Important Information:

To connect the unit to a TV, TV must have a Video input jack (RCA-type) at least. You cannot connect it to an antenna terminal of TV.

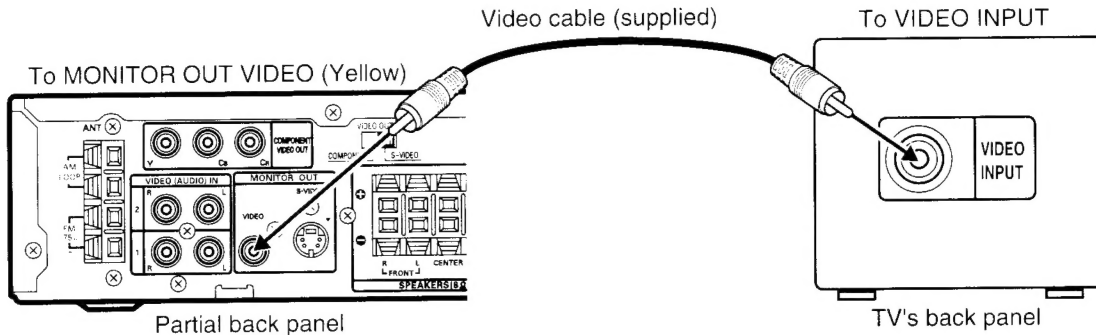

Notes:

- Please refer to the instruction manual of your TV.
- When you connect the unit to your TV, be sure to turn off the power and disconnect both units from the wall outlet until all the connections have been made.
- Do not connect the MONITOR OUT (S-VIDEO/VIDEO) and COMPONENT VIDEO OUT jacks of the unit to a VCR directly. The playback picture will be distorted because DVD video discs are copy protected.




**Need help? Call
1-800-421-5013**

Using MONITOR OUT S-VIDEO jack

Note:

Please follow the steps before turn on the power.

1. If your TV has the S-VIDEO INPUT jack, connect the *S-video cable (not supplied) between the MONITOR OUT S-VIDEO jack of the unit and the S-VIDEO INPUT jack of the TV. (The MONITOR OUT VIDEO jack connection is not necessary.)
You can enjoy clearer picture playback.
2. Set the VIDEO OUT SELECT switch to the **S-VIDEO** position.

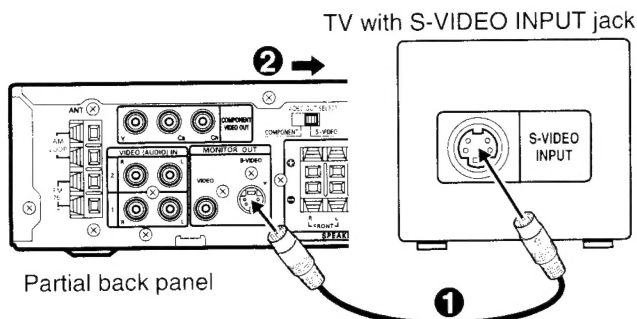

*S-video cable (not supplied)


*Please consult your local audio/video dealer.

Using COMPONENT VIDEO OUT jacks

Note:

Please follow the steps before turn on the power.

1. If your TV has the COMPONENT VIDEO INPUT jacks, connect the *Component Video cable (not supplied) between the COMPONENT VIDEO OUT jacks of the unit and the COMPONENT VIDEO INPUT jacks of the TV. (The MONITOR OUT VIDEO or S-VIDEO OUT jack connection is not necessary.)
You can enjoy high quality picture playback.
2. Set the VIDEO OUT SELECT switch to the **COMPONENT** position.

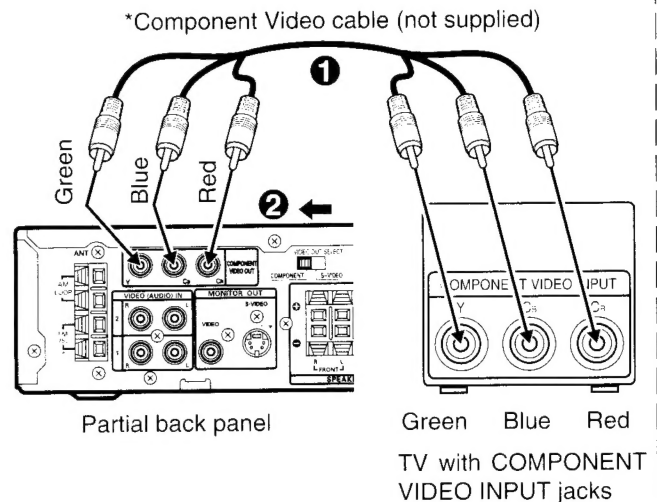


*Please consult your local audio/video dealer.

Using RF Modulator

If your TV does not have a Video input jack and has an antenna terminal only, please purchase the *RF Modulator (not supplied).
(*Please consult your audio/video dealer.)

Example: Unit, TV and RF Modulator connections

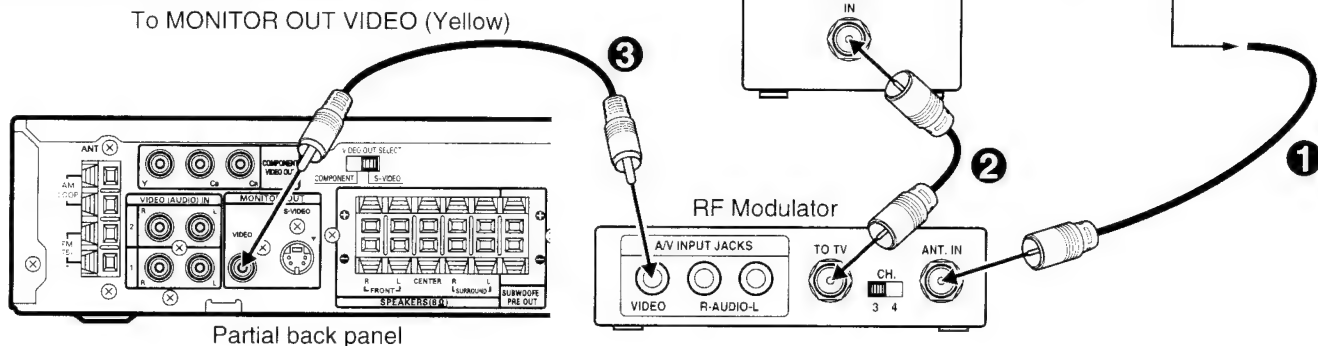


1. Connect the antenna cable (not supplied) to the ANT. IN terminal of the RF Modulator.
2. Connect the 75-ohm coaxial cable (not supplied) between the TO TV terminal of the RF Modulator and the VHF/UHF ANTENNA IN terminal of the TV.
3. Connect the Video cable with yellow connectors (supplied) between the MONITOR OUT VIDEO jack of the unit and the VIDEO input jack of the RF Modulator.

Note:

For more details, please refer to the instruction manual of the RF Modulator.

Example: Unit, VCR, TV and RF Modulator connections

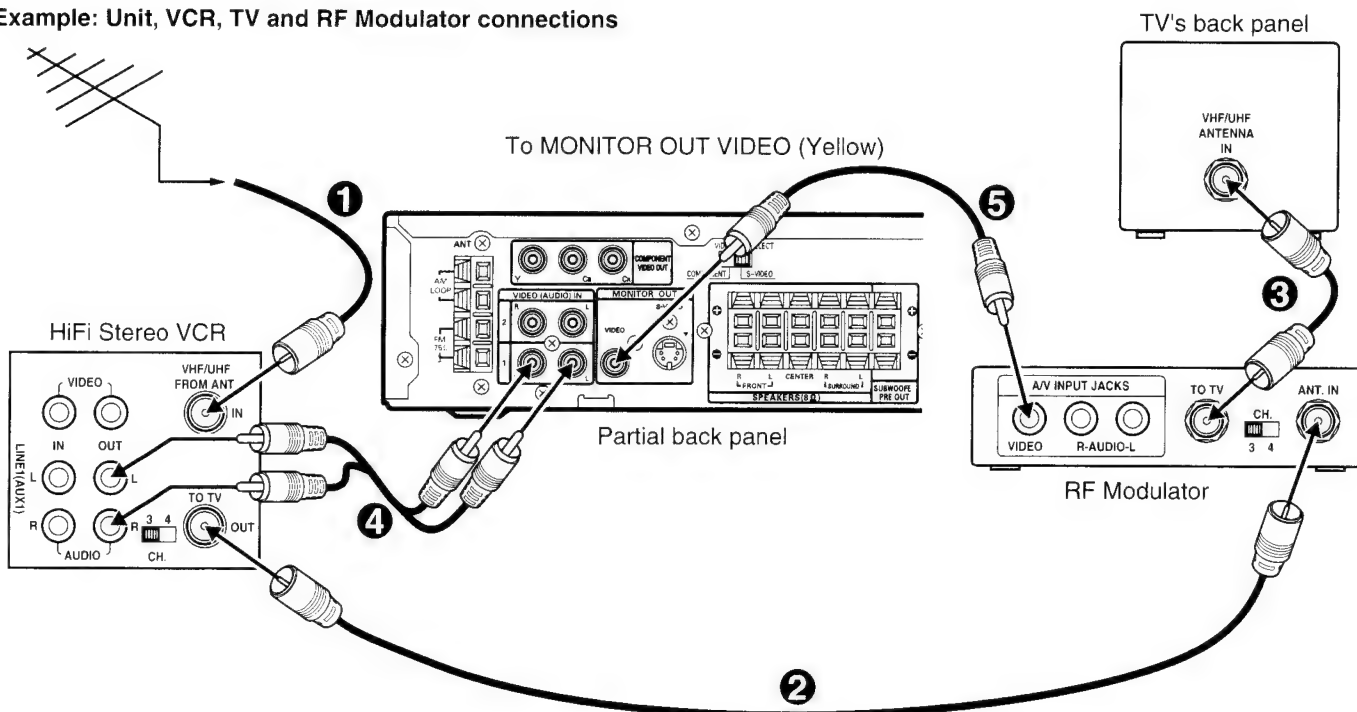

1. Connect the antenna cable (not supplied) to the VHF/UHF FROM ANT IN terminal of the VCR.
2. Connect the 75-ohm coaxial cable (not supplied) between the TO TV OUT terminal of the VCR and the ANT. IN terminal of the RF Modulator.
3. Connect the 75-ohm coaxial cable (not supplied) between the TO TV terminal of the RF Modulator and the VHF/UHF ANTENNA IN terminal of the TV.
4. Connect the audio cables (not supplied) between the VIDEO (AUDIO) IN 1 or 2 jacks of the unit and the AUDIO OUT jacks of the VCR. Use the red connectors for the right-R jacks and the white connectors for the left-L jacks.
5. Connect the Video cable with yellow connectors (supplied) between the MONITOR OUT VIDEO jack of the unit and the VIDEO input jack of the RF Modulator.

Note:

For more details, please refer to the instruction manual of the RF Modulator.

Antenna Connections

FM antenna


The FM indoor antenna lead wire is sufficient to receive most local FM broadcasts and should be connected to the rear FM 75 Ω terminal. Extend the antenna lead wire as straight as possible and, while listening to the sound from the system, secure it in a position where the best FM reception is found.

In fringe areas, or where reception is distorted or noisy, an FM outdoor antenna (not supplied) should be connected instead of the FM indoor antenna lead wire. The terminals will accept 75-ohm coaxial cable.

AM antenna

The AM loop antenna is sufficient to receive most local AM broadcasts. Assemble the loop antenna.

Unwind the antenna wires, then connect them to the AM LOOP terminals. Place the loop antenna in a position which yields the best AM reception, or attach it to a wall or other surface as shown.

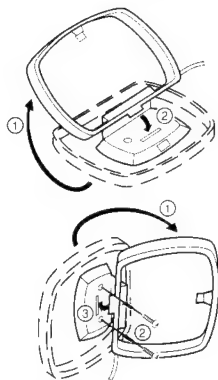

Screws (not supplied)

NOTE:

To minimize noise...

- Keep the speaker wires, power cord and all other system connection cables away from the loop antenna.
- Do not place the antenna close to a TV or speaker.


Note to CATV system installer:

This reminder is provided to call the CATV system installer's attention to Section 820-40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Additional Connection Examples

1st video equipment input jack (VIDEO (AUDIO) IN 1)

Connect an audio cable (not supplied) from the audio output jacks of the TV to the VIDEO (AUDIO) IN 1 jacks.

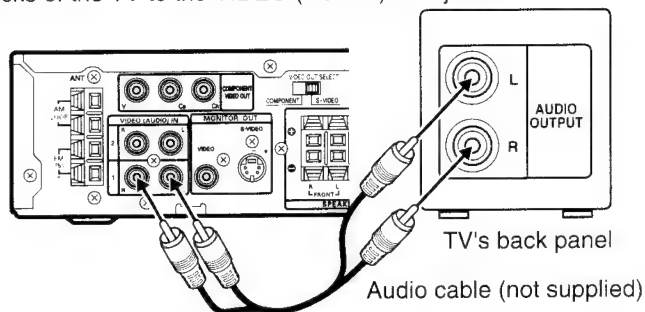



Audio cable (not supplied)

2nd video equipment input jack (VIDEO (AUDIO) IN 2)

Connect an audio cable (not supplied) from the audio output jacks of the video equipment to the VIDEO (AUDIO) IN 2 jacks.

CAUTION:

When installing an outdoor antenna, follow the installation instructions in the attached "IMPORTANT SAFETY INSTRUCTIONS".

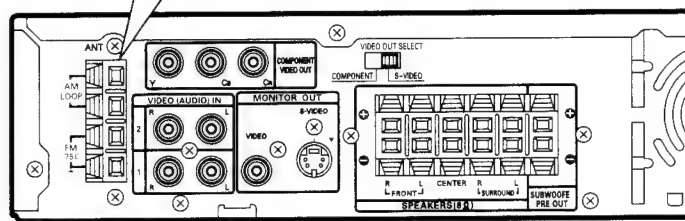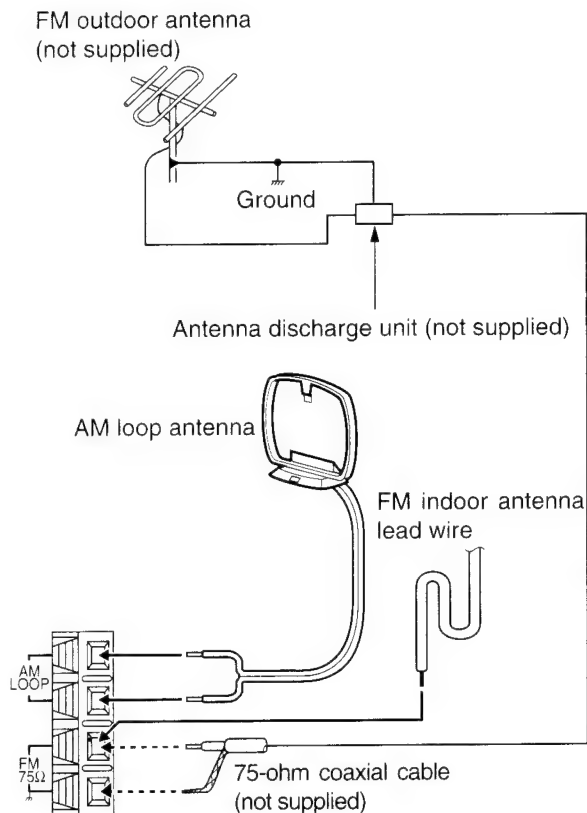

**Need help? Call
1-800-421-5013**

Headphones jack (PHONES)

 
Connect a pair of stereo headphones (8 ohms - 32 ohms, not available from Fisher) to the PHONES jack for monitoring or for private listening. The speakers are automatically disconnected when headphones are connected.



Power Supply (Main Unit and Active Subwoofer)

Connect the power cord to a 120VAC 60Hz outlet. This unit is equipped with a polarized plug. If you have difficulty inserting the plug, turn it over and reinsert it. If the unit will not be used for a long time, disconnect the AC plug from the AC outlet.

Press [POWER] of the active subwoofer to "ON".
The LED indicator lights on the subwoofer.




Notes:

- Before plugging the power cord into an AC outlet, make sure that all the connections have been made.
- The main unit is not disconnected from the AC power unless the power cord is unplugged from the AC outlet.


ADJUSTING THE CLOCK

Example: To set "PM 6:30" (Using the remote control)

 
1. Press [ON] to turn the power on. The STANDBY indicator goes off.
2. Press [CLOCK] while holding [SHIFT] down.
"AM 12:00" blinks.
3. Press [ADJUST] while holding [SHIFT] down.
The "hours" display blinks.



 
4. Press [◀◀] or [▶▶] to set the "hours".



 
5. Press [ADJUST] while holding [SHIFT] down.
The "minutes" display blinks.



 6. Press [◀◀] or [▶▶] to set the "minutes".



 7. Press [ADJUST] while holding [SHIFT] down.
The clock starts.



- The time can be set accurately by pressing [ADJUST] while holding [SHIFT] down when a time signal is heard.



To display the clock during operation

Press [CLOCK] while holding [SHIFT] down to display the clock.
(If leave it, the original display returns after approximately 10 seconds.)

Press [CLOCK] again while holding [SHIFT] down to return to the original display.


Note:

If a power failure occurs, reset the clock again.

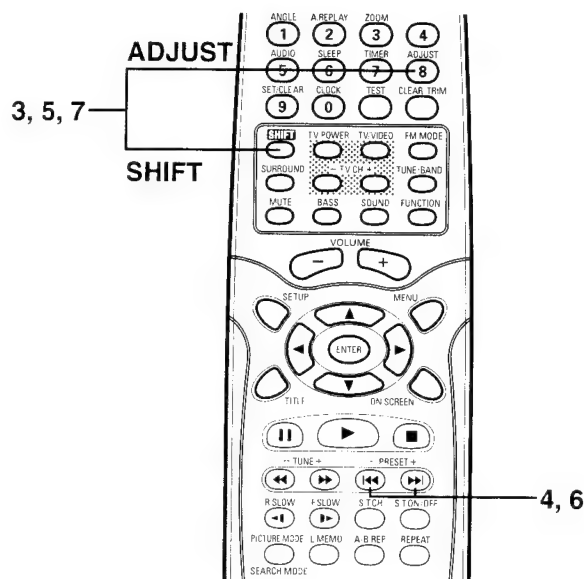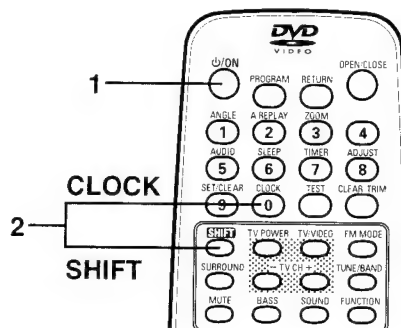

BEFORE OPERATION

Common Operation

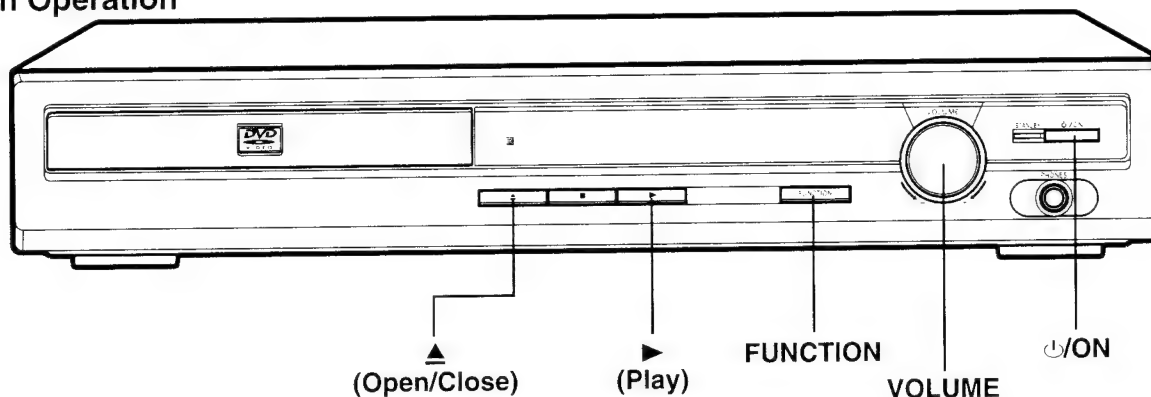

Turning the power on and off

Press [⏻/ON] to turn the power on.

- "HELLO" briefly appears on the FL display.
- The STANDBY indicator goes out.

(After connecting the power cord, when you press [⏻/ON] for the first time, the volume-reset feature automatically sets the initial volume level.)

When the power cord is connected to the AC outlet, the unit will respond to commands from the remote control.

Note:

Make sure that the POWER button of the subwoofer is set to "ON".

To turn the power off, press [⏻/ON] again.

- "GOOD-BYE" briefly appears on the FL display.
- The STANDBY indicator lights.

Smart start function

If the following buttons are pressed when the power is turned off, the unit turns on automatically and the selected source is activated.

- [▲], [▶] (Front panel of the unit)
- [OPEN/CLOSE], [▶], [TUNE/BAND] (Remote control)

Selecting the source

Press [FUNCTION] to select the desired source. Each time the button is pressed, the display changes as follows:

DVD/CD
VIDEO 1
VIDEO 2
FM TUNER
AM TUNER

- When the source selection is changed, disc playback automatically stops.


Adjusting the volume

Rotate [VOLUME] (or press [VOLUME] + or - on the remote control). The volume level appears on the display (VOL 0 ~ VOL MAX).

To reduce the volume temporarily (muting)

Press [MUTE] on the remote control. "MUTE" blinks on the FL display.

To restore the previous volume setting, press [MUTE] again.

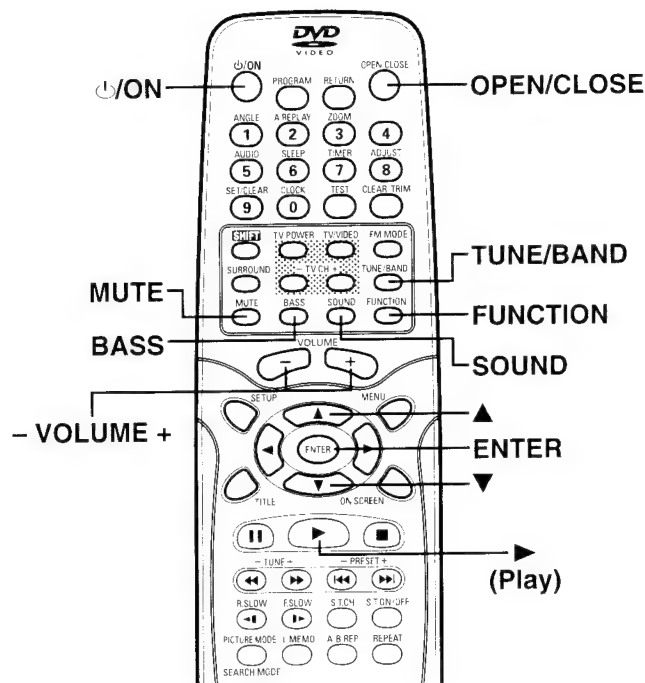

Selecting the sound mode

1. Press [SOUND] repeatedly to select the desired sound mode ("BASS", "TREBLE" or "FLAT").
2. Press "▲" or "▼" to adjust the sound level ("+5" ~ "-5").
Note:
If "FLAT" is selected, press [ENTER]. "- - FLAT - -" briefly appears. In this case, "BASS" and "TREBLE" are set to "0".
3. Repeat steps 1 to 2 for another sound mode.
4. Press [SOUND] repeatedly to close the display.

Bass boost system

Press [BASS] to select the desired bass boost effect.

BOOST → BASS OFF → NORMAL → BOOST ...

 
Selecting Surround Mode

Press [SURROUND] to select the surround mode.

Each time the button is preset, the surround mode changes as follows:

AUTO → SURR ON → 2CH MODE → AUTO...

SURROUND



Function	FL display	Description
DVD/CD	AUTO	<p>The unit selects the surround mode automatically depending on the disc.</p> <p>Dolby Digital (not encoded with Dolby Surround Sound) "DOLBY DIGITAL" appears on the FL display. Dolby Digital is a discrete 5.1 channel surround system, developed for cinema use. But, not all Dolby Digital sources are recorded with 6 channel. Some sources marked Dolby Digital may be recorded in Dolby Surround, a 2 channel system.</p> <p>Dolby Digital (encoded with Dolby Surround Sound) "DOLBY DIGITAL" and "DOLBY PL" appear on the FL display. The surround mode is set to Dolby Pro Logic mode. Dolby Pro Logic is a decoding system that was developed to enhance the soundtracks of theatrical motion pictures with Dolby Surround. All speakers sound, but the surround left and right speakers are monophonic sound.</p> <p>Other (PCM, CD, MP3, etc.) The surround mode is set to 2.1 channel (Front left and right speakers, and Subwoofer).</p>
	SURR ON	<p>When using a disc with Dolby Digital 3 channel ~ 5.1 channel, it is set to Dolby Digital sound mode. When using an MP3 CD, it is set to matrix-surround mode (not Dolby Pro Logic). Other discs are set to Dolby Pro Logic mode.</p>
	2CH MODE	<p>The surround mode is set to 2.1 channel (Front left and right speakers, and Subwoofer).</p>
VIDEO 1 VIDEO 2 FM TUNER AM TUNER	AUTO	<p>It is set to 2.1 channel (Front left and right speakers, and Subwoofer).</p>
	SURR ON	<p>All speakers work, but it is set to the matrix-surround mode (not Dolby Pro Logic). If a monaural source is used, it is set to 3.1 channel (Front left and right, Center speaker, and Subwoofer).</p>
	2CH MODE	<p>It is set to 2.1 channel (Front left and right speakers, and Subwoofer).</p>

Notes:

- DVD video disc with DTS may not work correctly. You can see the picture on the TV screen, but there is no sound.
- There is no Dolby Surround effect when monaural program material is used.
- When receiving weak FM broadcasts, set it to "2CH MODE". The sound quality may improve.
- When headphones are connected while any of the surround modes are selected, the surround mode is switched off automatically. The SURROUND button does not function while headphones are connected.



Need help? Call
1-800-421-5013

Adjusting the Speaker Volume Balance

This unit is set to the standard level before shipping from the factory. You may not need adjustment. But, depending on the size of the room and the placement of the speakers, you may need a fine adjustment. In this case, follow the steps below. Please use the remote control at the listening point.

1. Press [FUNCTION] to select the "DVD/CD" function.
2. Press [■] to stop playback completely.
3. Press [TEST] on the remote control.
The "Speaker" screen appears on the TV screen.
"FNTL 0" appears on the FL display.
The test tone will be heard from each speaker in the following order.

TV screen	FL display	Speaker
Front-L	FNTL 0	Front left speaker
Center	CENT 0	Center speaker
Front-R	FNTR 0	Front right speaker
Surround-R	SURR 0	Surround right speaker
Surround-L	SURL 0	Surround left speaker

4. Press [VOLUME] + or - until the test tone is at a comfortable level.
5. If the test tone level is not the same from each speaker, press [▼] or [▲] to adjust it while the speaker is activating. The level appears on the FL display.


FNTL/FNTR: "0" ~ "-10" appears.
CENT/SURR/SURL: "+10" ~ "-10" appears.

If necessary, repeat this step again.

6. Press [TEST] to turn the test tone off.
Note:
If no adjustments are made, the original display returns after the test tone turns around you 5 times.
7. Press [VOLUME] + or - to adjust the volume as desired.

Adjusting the Subwoofer Level

1. Press [TRIM] while holding [SHIFT] down.
"FNTL 0" appears on the FL display.
Note: No test tone.
2. Press [ENTER] repeatedly to select "SUBW".
Note:
Each time the button is pressed, the FL display shows the selected speaker and tone level.
3. Press [▼] or [▲] to adjust the level as desired.
SUBW: "+10" ~ "-10" appears.
Note:
If the other speaker is selected, the level also can be changed as above.
4. Press [TRIM] while holding [SHIFT] down to turn it off.
Note:
If no adjustments are made, the original display returns after approximately 10 seconds.

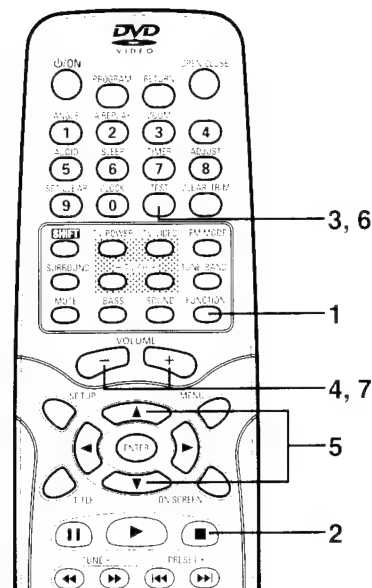


IMPORTANT INFORMATION:

Set the delay time for your center and surround speakers. See "Setting Audio" on page E32.




Need help? Call
1-800-421-5013

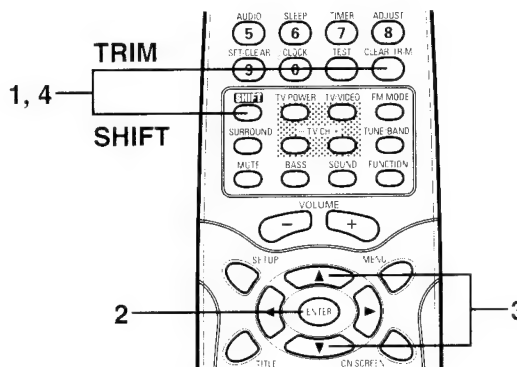



Phase Switch of the Subwoofer

 If you feel lack of bass frequency, press [PHASE] (back of the subwoofer) to select "0°" or "180°". Select the setting that gives the best result.



PLAYABLE DISCS

The following types of discs can be played on this unit.

Disc type and logo mark		Recorded content	Disc size	Maximum playing time
DVD Video		Audio + Video	5 inches (12 cm)	Approx. 4 hours (Single sided disc) Approx. 8 hours (Double sided disc)
			3 inches (8 cm)	Approx. 80 minutes (Single sided disc) Approx. 160 minutes (Double sided disc)
Music CD		Audio	5 inches (12 cm)	74 minutes
			3 inches (8 cm)	20 minutes

Region Number

Region number (Regional restriction code) is built-in to the DVD video player and DVD video discs.

Region number "1" or "ALL" of DVD video discs can be used on this unit.



DVD Video Disc

There are the marks on some DVD video disc package.

Examples:



 
Multiple languages



Multi-language subtitles



Multi-angle



Multi-aspect



Region number

 


Closed caption

CAUTION:


- Only the above types of discs can be played on this unit. DVD-ROM, CD-ROM, SVCD, CVD, VCD, etc. cannot be played.
- This unit can play back the DVD-R that has recorded movie data as well. However, some DVD-Rs can not be played back depending on the recording conditions.
- The DVD-R that has no movie data can not be played back.
- This unit is to be used exclusively with the NTSC color system. PAL and SECAM system discs cannot be used with this unit.
- For MP3 CD, please see page E27.**

DVD Video Disc



DVD video discs are divided into titles, and the titles are sub-divided into chapters.

 Music CD Disc



Music CD discs are divided into tracks.

Handling, Storing and Cleaning Discs

- Fingerprints and dust should be carefully wiped from the signal surface of the disc (glossy side) with a soft cloth. Wipe in a straight motion from the center to the outside of the disc.
- Never use chemicals such as record cleaning sprays, antistatic sprays or fluids, benzene or thinner to clean the discs. These chemicals will permanently damage the plastic surface of the disc.
- To remove a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.

- Discs should be returned to their cases after use to protect them from dust and scratches.
- To prevent warping the disc, do not expose it to direct sunlight, high humidity or high temperatures for extended periods of time.
- Do not apply paper or write anything on either side of the disc. Sharp writing instruments, or the inks used in some felt-tip pens, may damage the surfaces of the disc.



DISC PLAYBACK

Preparations

- Turn on the TV and select the video input source.

To use the remote control for TV

Note:

You must set the remote control code for TV first. (See Page E6.)

- Press [TV POWER] to turn on the power.
 - When using the remote control, the Transmitter Window on the remote control must be pointed toward your TV.
- Press [TV/VIDEO] to select the video input source.
- Set the TV volume minimum.

Notes:

- Only remote-controlled TVs can be operated using this remote control. (Refer to your TV instruction manual for more details.)
- There may be some older TV models that cannot be operated with this remote control. If this is the case, use the original remote control supplied with the TV.

- Select the playback picture size according to the aspect ratio of the TV. (See "Setting Display" in "INITIAL SETTINGS" on Page E31.)

Basic Playback

Notes:

- Do not touch the disc tray while it is moving.
- Never place anything except a disc on the disc tray. Foreign objects can damage the unit.
- Do not apply excessive force to the disc tray.
- Discs must be placed on the disc tray one at a time.


When operation buttons are pressed, that operation is displayed on the TV screen. The display disappears after several seconds.

- Press [▲] on the unit (or [OPEN/CLOSE] on the remote control).
 - "OPEN" appears on the FL display and the disc tray opens.
 - "FISHER" logo appears on the TV screen.


Note:

To open close the disc tray, be sure to use [▲] (or [OPEN/CLOSE]). Do not press the disc tray with your hand.

- Place the disc with the label facing up on the disc tray.

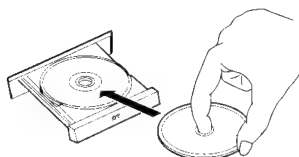




For 5-inch (12cm) disc

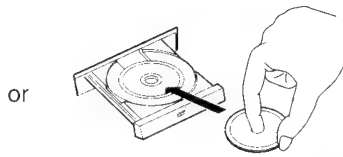

For 3-inch (8cm) disc

Important Note:


- This instruction manual explains the basic instruction of this unit using the remote control unit.
- Some DVD video discs have different functions that may not be explained in this instruction manual. You may need extra instructions. In this case, please follow the instructions displayed on the TV screen or jacket or case of the disc.
- "⊙" may appear on the TV screen during operation. This icon means that the function is not available on the disc now.
- For improvement, on-screen displays subject to change without notice.

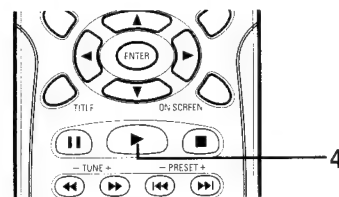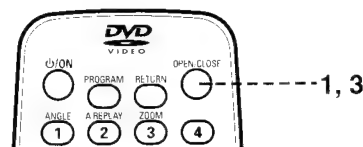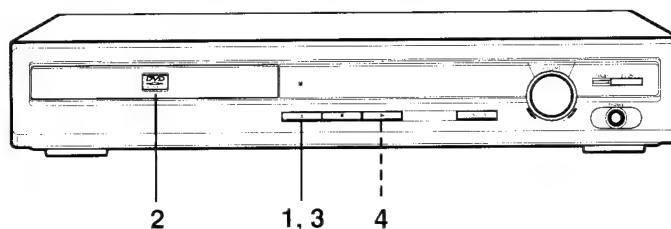

- Press [▲] (or [OPEN/CLOSE]) again. The disc tray closes. "READING" appears on the FL display. Notes:

- Some discs may start playback automatically.
- If the disc is loaded with the label side downward (and it is a single sided disc), or if a badly scratched disc is loaded, "NO DISC" (or "NO PLAY") appears. If this occurs, load the disc correctly or replace the disc.

- Press [▶] to start playback. Example:

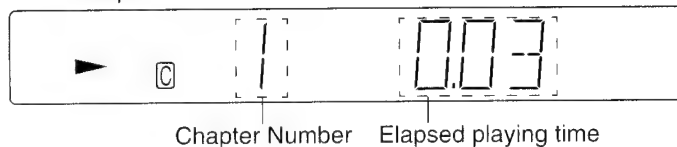


If a menu screen appears on the TV screen...

Select the desired menu by pressing [▲], [▶], [▼] or [◀] (or the number buttons), then press [ENTER]. Playback of the selected menu starts.

Note:

 For more details, please refer to the jacket or case of the disc.



- Press **[■]** once during playback. “Resume **■**” briefly appears on the TV screen.
When you press **[▶]**, playback starts automatically from the point where you stopped. “▶” briefly appears on the TV screen.

Some discs may not resume playback.



- Press **[■]** twice during playback. “■” briefly appears on the TV screen and playback stops completely. When you press **[▶]**, playback starts from the beginning of the disc.

1. Press [L.MEMO] to stop playback.
"Last Memo ■" briefly appears on the TV screen.
"LM-STOP" appears on the FL display.
2. Remove the disc or turn off the power.
3. Load the disc (and press [▶]), or turn on the power.
"Last Memory Play?" appears on the TV screen.
Yes
No
Clear ... (The memory is released.)


4. Use **[▲]** to select “Yes”.
5. Press **[ENTER]**.
Playback resumes from the point where you stopped.
If desired, press **[L.MEMO]** again.

- Point on up to 3 discs can be memorized.
- The Last Memory Play mode may not work correctly with some discs.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

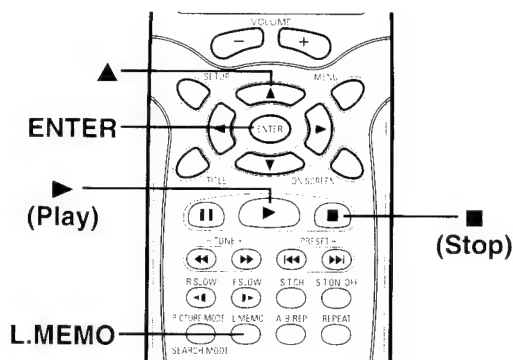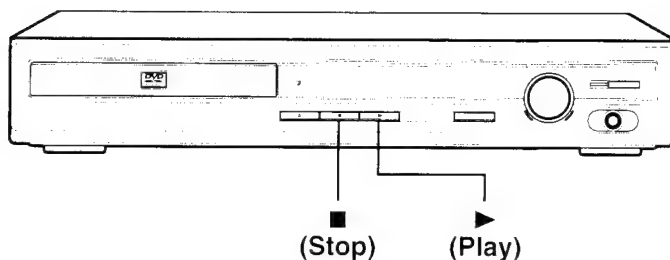

Press **[▶▶]** during playback to skip to the next chapter (or track).
 “▶▶” briefly appears on the TV screen.
 A chapter (or track) is skipped each time the button is pressed.

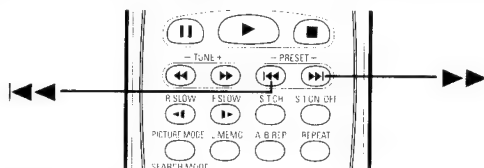

Press [◀◀] during playback to skip back to the beginning of the chapter (or track) currently play.
 “◀◀” briefly appears on the TV screen.
 Press the button again immediately to skip back to the beginning of the previous chapter (or track).

You can skip only through the chapters, not over the title on the DVD disc.



**Need help? Call
1-800-421-5013**

Selecting a DVD Menu

Notes:


- The operation may differ depending on the disc used.
- Selecting a menu may not be possible on some discs.

1. Press [MENU].
The main menu screen will appear.

Note:

Press [MENU] again to resume playback.

2. Press [▲], [▼], [◀] or [▶] (or the number buttons) to select the desired menu.
3. Press [ENTER]
The selected menu playback starts.

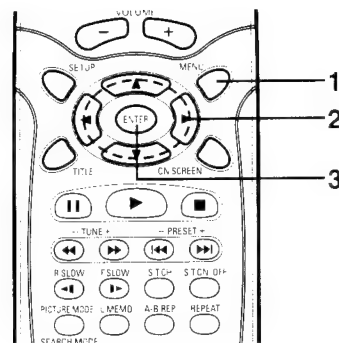

Selecting a Title Menu [DVD]

Notes:


- The operation may differ depending on the disc used.
- Selecting a title may not be possible on some discs.

1. Press [TITLE].
The title menu will appear (if the disc contains a title menu).

Note:

Press [TITLE] again to resume playback from the scene when [TITLE] was first pressed on some discs.

2. Press [▲], [▼], [◀] or [▶] (or the number buttons) to select the desired title.
3. Press [ENTER].
The selected title playback starts.

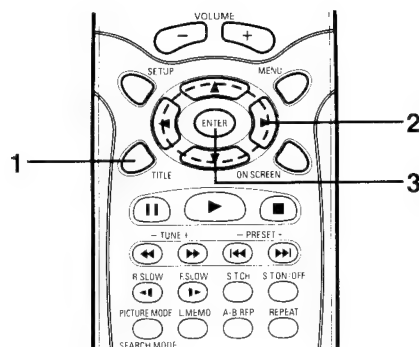

Important Note:


"⊘" may appear on the TV screen during operation. This icon means that the function is not available on the disc now.



Need help? Call
1-800-421-5013

Title Search [DVD]

1. Press [SEARCH MODE] once while holding [SHIFT] down during playback or in the stop mode.
The title search screen appears on the TV screen.
Example:
Title Search --/02
2. Press the number button(s) to enter the title number.
Example:
To select Title No.3, press [3].
To select Title No.10, press [1], then [0].
To select Title No.24, press [2], then [4].
Note:
If you make a mistake, press [CLEAR].
3. Press [▶].
Playback starts from the selected title.

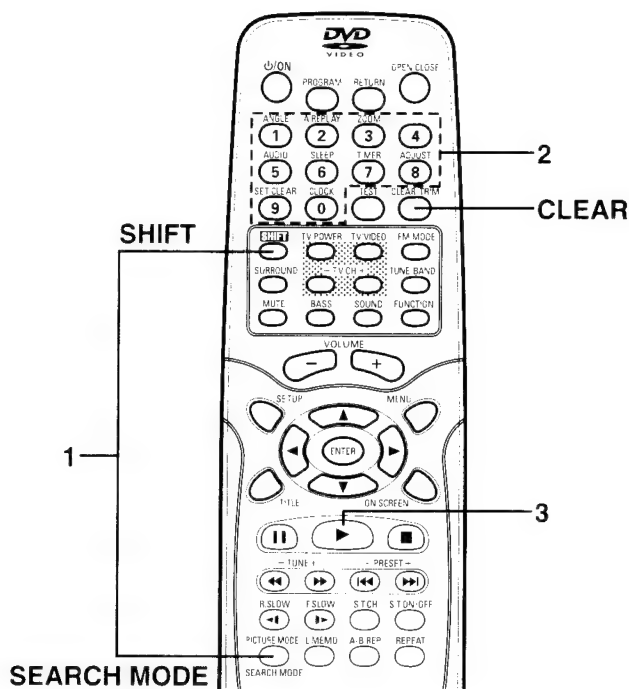

Chapter Search [DVD]

1. Press [SEARCH MODE] twice while holding [SHIFT] down during playback.
The chapter search screen appears on the TV screen.
Example:
Title 01 Chapter Search --/35
2. Press the number button(s) to enter the chapter number.
Example:
To select Chapter No.3, press [3].
To select Chapter No.10, press [1], then [0].
To select Chapter No.24, press [2], then [4].
Note:
If you make a mistake, press [CLEAR].
3. Press [▶].
Playback starts from the selected chapter.

Time Search [DVD]

1. Press [SEARCH MODE] three times while holding [SHIFT] down during playback.
The time search screen appears on the TV screen.
Example:
Time Search --:--:--
2. Press the number button(s) to enter the time.
Example:
20 minutes 5 seconds Press [2], [0], [0] and [5].
42 minutes 39 seconds Press [4], [2], [3] and [9].
1 hour 4 minutes 35 seconds Press [1], [0], [4], [3] and [5].
Note:
If you make a mistake, press [CLEAR].
3. Press [▶].
Playback starts from the searched time.

Time Search [CD]

1. Press [SEARCH MODE] once while holding [SHIFT] down during playback.
The time search screen appears on the TV screen.
Example:
Time Search --:--:--
2. Press the number button(s) to enter the time.
Example:
2 minutes 5 seconds Press [2], [0] and [5].
42 minutes 39 seconds Press [4], [2], [3] and [9].
Note:
If you make a mistake, press [CLEAR].
3. Press [▶].
Playback starts from the searched time in the track.

Track Search [CD]

1. Press the number buttons during playback or in the stop mode.
Example:
To select Track No. 3, press [3].
To select Track No. 10, press [1], then [0].
To select Track No. 24, press [2], then [4].
2. Press [▶].
Playback starts from the selected track.



**Need help? Call
1-800-421-5013**

Fast Playback

Fast forward playback

Press [▶▶] repeatedly to select the fast speed forward playback.

[DVD]

▶▶ 1 → ▶▶ 2 → ▶▶ 3 → ▶▶ 4 (4 steps)

[CD]

▶▶ 1 → ▶▶ 2 (2 steps)

Press [▶] to return to normal playback.

Fast reverse playback

Press [◀◀] repeatedly to select the fast speed reverse playback.

[DVD]

◀◀ 1 → ◀◀ 2 → ◀◀ 3 → ◀◀ 4 (4 steps)


[CD]

◀◀ 1 → ◀◀ 2 (2 steps)

Press [▶] to return to normal playback.

Note:

The sound is muted during fast playback in DVD.

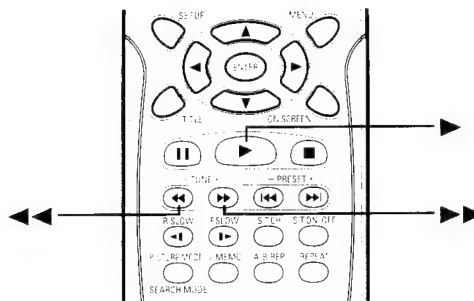

Important Note:

"⊙" may appear on the TV screen during operation. This icon means that the function is not available on the disc now.

Slow Motion Playback [DVD]

Forward slow playback

Press [F.SLOW ▶] repeatedly to select the forward slow speed playback.

▶ 1 → ▶ 2 → ▶ 3 → ▶ 4 (4 steps)

Press [▶] to return to normal playback.

Reverse slow playback


Press [R.SLOW ◀] repeatedly to select the reverse slow speed playback.

◀ 1 → ◀ 2 → ◀ 3 → ◀ 4 (4 steps)

Press [▶] to return to normal playback.

Note:

The sound is muted during slow motion playback.

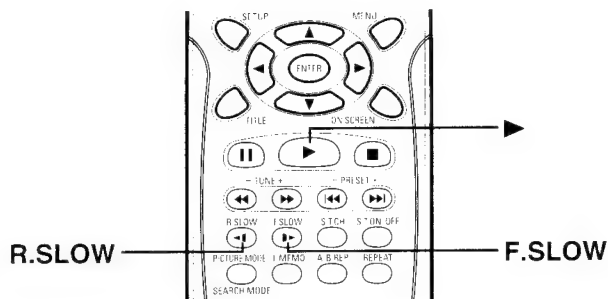

Still Picture (Pause)

Press [⏸] during playback.

- "⏸" appears on the FL display.
- "⏸" briefly appears on the TV screen.

Press [▶] to return to normal playback.


[DVD]

Still picture mode

[CD]

Pause mode

Note: The sound is muted.

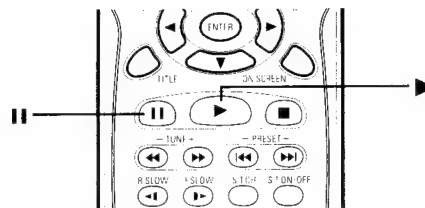

Frame by Frame Advance Playback [DVD]

Press [⏸] during still picture.

- "⏸" briefly appears on the TV screen.

Each time the button is pressed, the picture advances one frame.

Press [▶] to return to normal playback.

Notes:

- The sound is muted.
- Frame playback is operated forward only.



**Need help? Call
1-800-421-5013**

Picture Zoom [DVD]

1. Press [ZOOM] while holding [SHIFT] down during normal/slow playback or still picture.

The central part of the picture is magnified, and “Q 1” appears on the TV screen.

- Each time the button is pressed, the zoom mode will be changed as follows:


Q 1 → Q 2 → Q Off

- Press [▲], [▶], [▼] or [◀] to change the zoom point.

2. Press [ZOOM] while holding [SHIFT] down to select “Q Off” to return to the original screen.

Note:

Picture Zoom may not work on some discs.

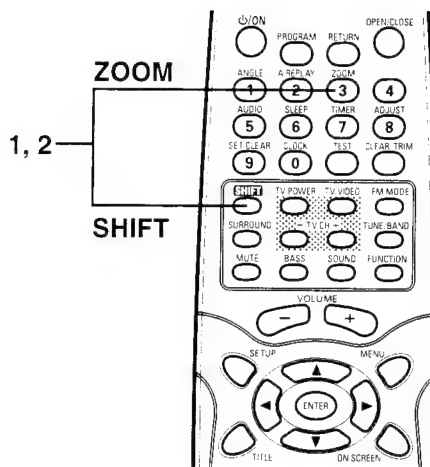

Viewing from a Desired Camera Angle (Multi-Angle) [DVD]

Some DVD video discs may contain scenes which have been shot simultaneously from a number of different camera angles. The jacket or case of discs that are recorded with angles will be marked.

Example:





Note:

The recorded angles differ depending on the disc used.

1. Play the disc that is recorded with angles.
2. Press [ANGLE] repeatedly while holding [SHIFT] down until the desired angle appears.


Example:

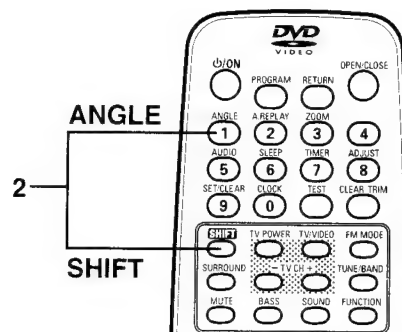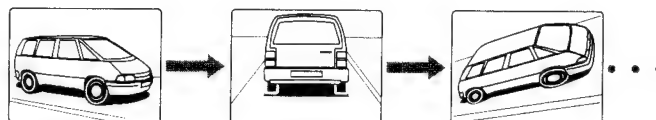

Angle Replay

During Multi-angle playback screen, press [A.REPLAY] while holding [SHIFT] down.

The player skips back to last approximately 10 seconds, changes it to the next camera angle and plays it, and continues playback. If desired, press both buttons again.

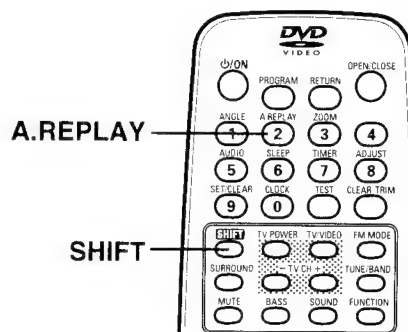

Important Note:

“⊗” may appear on the TV screen during operation. This icon means that the function is not available on the disc now.



**Need help? Call
1-800-421-5013**


Normal Repeat Playback

Press [REPEAT] during playback (or programmed play) of the title (or track) you want to repeat.

Each time the button is pressed, the repeat mode will be changed as follows:

[DVD]

- ↺ Chapter (1 REP.): Repeat of chapter being played
- ↺ Title (ALL REP.): Repeat of title being played
- ↺ Off: Normal playback mode

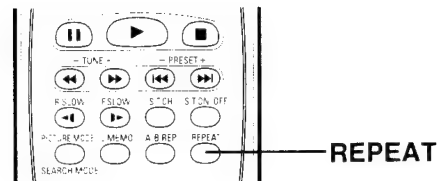



[CD]

- ↺ 1 (1 REP.): Repeat of track being played
- ↺ All (ALL REP.): Repeat all tracks
- ↺ Off: Normal playback mode

Designated Range Repeat Playback (A-B Repeat)

1. Press [A-B REP] during playback at the beginning of the section you want to repeat (Point A).
 - "A-" appears on the TV screen.
 - "A-REP." appears on the FL display.
2. Press [A-B REP] again at the end of the section you want to repeat (Point B).
 - "B" briefly appears on the TV screen.
 - "A-B REP." remains lit on the FL display.

The section between points A and B is played repeatedly.
3. To return to normal playback, press [A-B REP] again.
 - "Off" briefly appears on the TV screen.

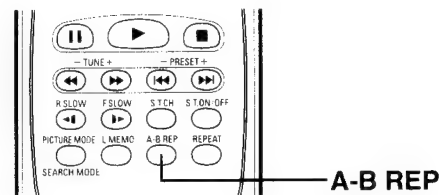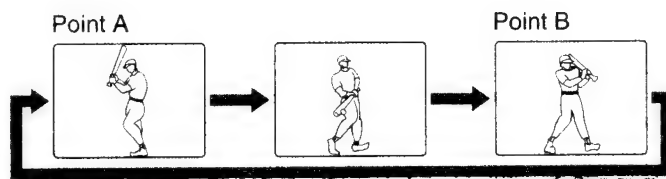

Note:

Normal repeat playback or A-B repeat playback mode may not work correctly with some discs.

Important Note:

"⊘" may appear on the TV screen during operation. This icon means that the function is not available on the disc now.



**Need help? Call
1-800-421-5013**

Programmed Playback [CD]

Up to 20 selections can be programmed.

Programming procedure

- Press [PROGRAM] in the stop mode.
 - "Program Mode" screen appears.
- Press the number buttons to select the track number.

Example:

To select Track No.3, press [0], then [3].

To select Track No.10, press [1], then [0].

To select Track No.24, press [2], then [4].

Notes:

 - If you make a mistake, press [CLEAR].
 - To quit the "Program Mode" screen, press [PROGRAM].


- Press [▼] to move the highlighted box down.

Example:

Program Mode

All Clear

1	03	6	--	11	--	16	--
2	--	7	--	12	--	17	--
3	--	8	--	13	--	18	--
4	--	9	--	14	--	19	--
5	--	10	--	15	--	20	--

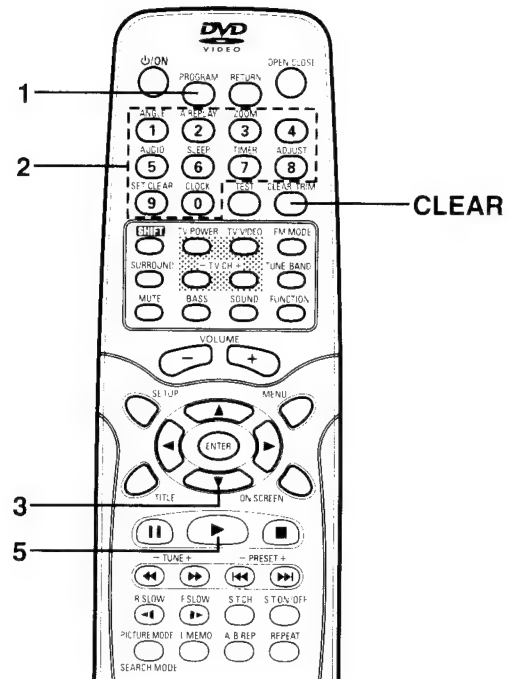

- Repeat step 2 and 3 above to select another track.
- Press [▶] to start playback.
 - "PROG." remains lit on the FL display.

When all programmed selections have played, the player stops automatically.

 - The program contents are retained in memory.

Note:

To play the program again, press [PROGRAM] to call up the program screen, then press [▶].

To clear the program one by one

- Press [PROGRAM] to display the "Program Mode" screen.
- Press [▲] or [▼] to select the track number.
- Press [CLEAR].

To clear all the programs

- Press [PROGRAM] to display the "Program Mode" screen.
- Press [▲] to select "All Clear".
- Press [ENTER].

To change the program

- Press [PROGRAM] to display the "Program Mode" screen.
- Press [▲] or [▼] to select the track number.
- Press the number buttons to select the track number to be replaced.

Note:

To quit the "Program Mode" screen, press [PROGRAM].

Important Note:

"⊘" may appear on the TV screen during operation. This icon means that the function is not available on the disc now.



Need help? Call
1-800-421-5013

Selecting Subtitle Language [DVD]


This operation works only with discs on which multiple subtitle languages are recorded.

1. Press [S.T.ON/OFF] during playback.
" " appears.
2. Press [S.T.CH] repeatedly until the desired subtitle language appears on the TV screen.
After few seconds, " " disappears.
Example:

1/3 fr
French

Notes:

- In some cases, the subtitle language is not changed to the selected one.
- When a disc supporting closed caption is played, the subtitle and the closed caption may overlap each other on the TV screen. In this case, turn the subtitle off.
- When the desired language is not selected even if the button is pressed, the language is not available on the disc.
- When the power is turned on or the disc is replaced, select the subtitle language again.
- If the subtitle language is not necessary, press [S.T.ON/OFF] to select " Off".

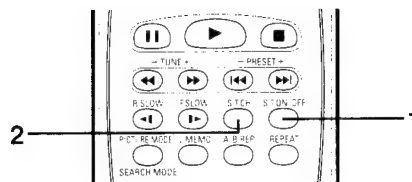

Important Note:

" " may appear on the TV screen during operation. This icon means that the function is not available on the disc now.

Selecting Audio Soundtrack Language (Multi-Language) [DVD]


This operation works only with discs on which multiple audio soundtrack languages are recorded.

1. Press [AUDIO] while holding [SHIFT] down during playback.
2. Press [AUDIO] repeatedly while holding [SHIFT] down until the desired language appears on the TV screen.
Examples:

1/4 fr
French

1/3 DTS
DTS sound

(If you use a DVD video disc with DTS, "DTS" appears. You can see the picture on the TV screen, but there is no sound.)

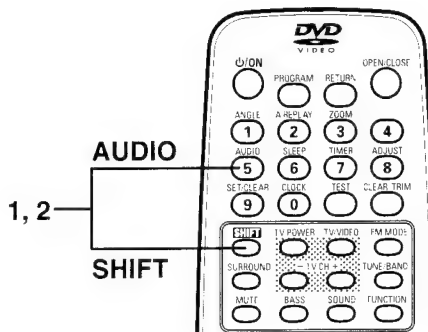

Notes:

- When the desired language is not selected even if the button is pressed, the language is not available on the disc.
- When the power is turned on or the disc is replaced, select the language again.
- If the language is not recorded on the disc, only the available language on the disc will be heard.



 
Need help? Call
1-800-421-5013

Selecting On-Screen Information


Press [ON SCREEN] repeatedly to show the disc information (Title, Chapter, Title elapsed playing time, Language, etc.).

Example for DVD:

1. Press [ON SCREEN] during playback.




2. Press [ON SCREEN].

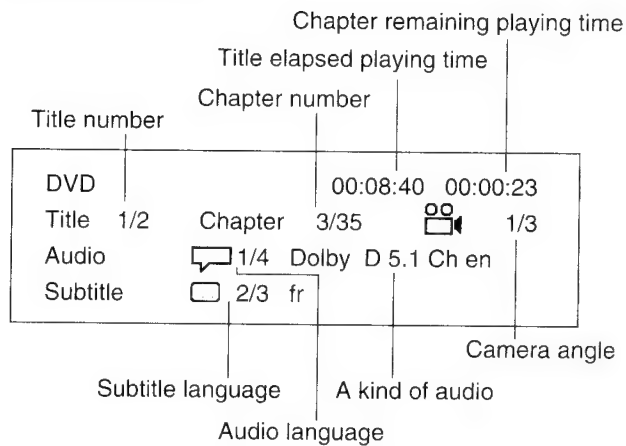


3. Press [ON SCREEN] to close the disc information.

Example for Music CD:

 1. Press [ON SCREEN].



2. Press [ON SCREEN].

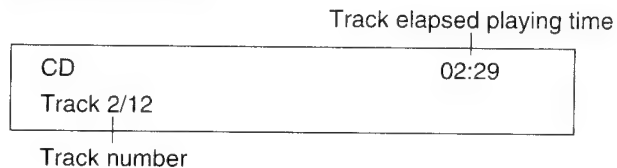

3. Press [ON SCREEN] to close the disc information.


For improvement, on-screen displays subject to change without notice.

Selecting Picture Mode

Press [PICTURE MODE] to show the picture mode.

Each time the button is pressed, the picture mode changes as below.

Standard → Mild → Black and White → Standard ...

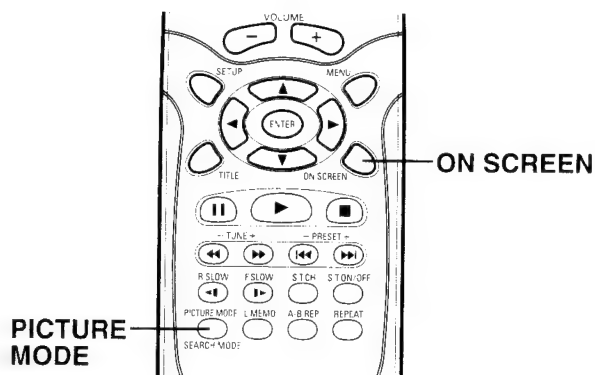

Important Note:

“⊙” may appear on the TV screen during operation. This icon means that the function is not available on the disc now.



**Need help? Call
1-800-421-5013**

MP3 CD OPERATION

This unit can play back the CD-R/RW that have recorded music data or MP3 files. However, some CD-R/RWs can not be played back depending on the recording conditions.
Before playing back MP3 CD, please read the following.

MP3 CD Information

Limitations on MP3 CD playback

- MP3 CD is the disc that standardized by ISO9660 Level 2.
- This unit can recognize up to 200 files or folders per disc. The CD with 201 files or folders and over is not available to this player.
- MP3 CD may not be played in the recorded order.
- As for multi-session disc, only the first session can be played.
- If the CD has both audio tracks and MP3 files, only audio tracks are played.
- It would take 30 seconds or more for this player to read MP3 files depending on its structure.

Limitations on display

- The maximum number for directory name is approximately 8 letters.
- The maximum number for file name is approximately 10 letters.

- Available letters for display are the following: capital or small alphabets of A through Z, and numbers of 0 through 9.
- Other letters than those above are replaced in "-" (hyphen).

Notes on MP3 files

- The recommend recording setting for a high-quality sound is 44.1 kHz of sampling frequency and 128kbps of fixing bit rate.
- To play back MP3 CD in the recorded order,
 1. Please use the MP3 software with the function that can record data alphabetically or numerically.
 2. Please refrain from making many sub-folders by preference.

CAUTION:

- Some MP3 CDs can not be played back depending on the recording conditions.
- The CD-R/RW that has no music data or non-MP3 files can not be played back.
- The CD-R/RW that has video data can not be played back.


MP3 CD Playback

1. Press [▲] (or [OPEN/CLOSE]).
 - "OPEN" on the FL display appears and the disc tray opens.

Note:

To open or close the disc tray, be sure to press [▲] (or [OPEN/CLOSE]). Do not press the disc tray with your hand.



2. Place the disc with the label facing up on the disc tray.

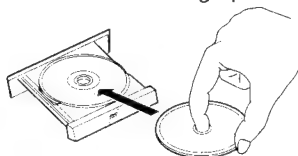

3. Press [▲] (or [OPEN/CLOSE]).
 - The disc tray closes.
 - "READING" appears on the FL display.
 - A table of contents in the root directory appears on the TV screen.

Example: (the root directory)

MP3	HYPE-AX	-/24	00:00:00
1	MUSIC001	8	MUSIC008
2	MUSIC002	9	MUSIC009
3	MUSIC003	10	MUSIC010
4	MUSIC004	11	MUSIC011
5	MUSIC005	12	MUSIC012
6	MUSIC006		
7	MUSIC007		

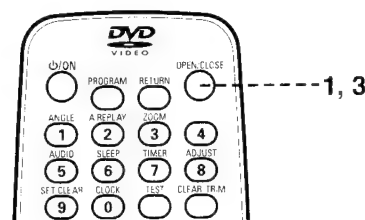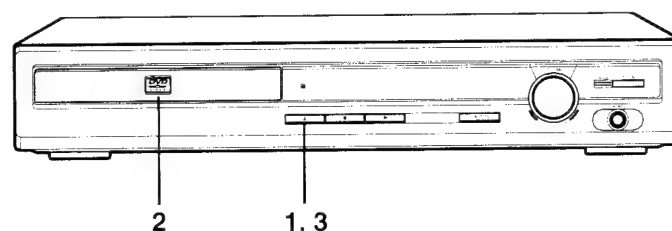

Note:

If the disc is loaded with the label side downward, or if a badly scratched disc is loaded, "NO DISC" (or "NO PLAY") appears. If this occurs, load the disc correctly or replace the disc.




Need help? Call
1-800-421-5013

4. Select the desired file by pressing [▲], [▶], [▼] or [◀].
The selected file number is highlighted.
 - To go on to the next directory, press [▲] to move the highlighted box to the folder (Example: MP3[HYPE-AX]), then press [ENTER].
A table of contents in the selected directory appears on the TV screen.
 - To go back to the previous directory, press [RETURN].
 - In some discs, if [MENU] is pressed, it goes back to the root directory.

5. Press [▶] to start playback.
 - Current file number, total file number and current file elapsed playing time are displayed on the TV screen.

Example: (the second directory)

MP3	MAX2	13/24	00:00:08
13	MUSIC013	20	MUSIC020
14	MUSIC014	21	MUSIC021
15	MUSIC015	22	MUSIC022
16	MUSIC016	23	MUSIC023
17	MUSIC017	24	MUSIC024
18	MUSIC018		
19	MUSIC019		

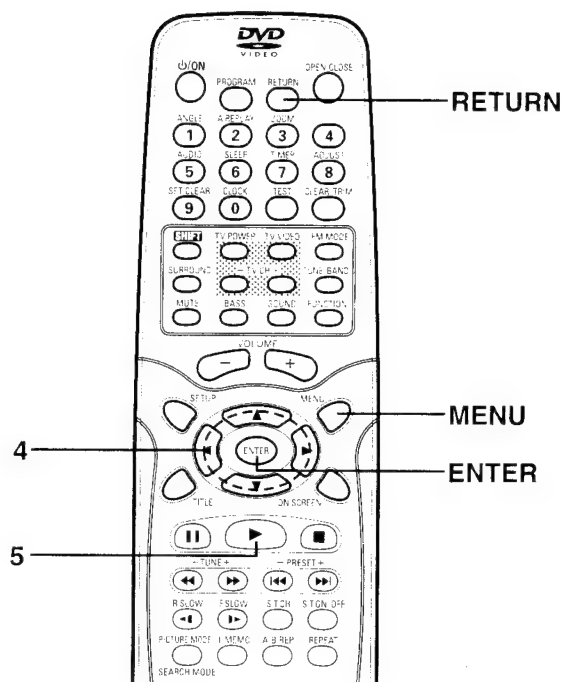

Important Note:

“⊘” may appear on the TV screen during operation. This icon means that the function is not available on the disc now.

Stopping Playback

Press [■] during playback. “■” briefly appears on the TV screen and playback stops completely.

Pause


Press [⏸] during playback.

- “⏸” briefly appears on the TV screen.
- “⏸” appears on the FL display.

Note:

The sound is muted.

Press [▶] to return to normal playback.

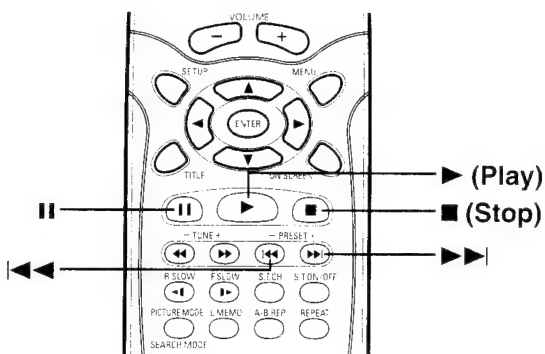

File Skip

Skipping forward

Press [▶▶] during playback to skip to the next file.
“▶▶” briefly appears on the TV screen.

Skipping backward

Press [◀◀] during playback to skip back to the beginning of the file currently play.

“◀◀” briefly appears on the TV screen.

Press the button again immediately to skip back to the beginning of the previous file.

Repeat Playback


Press [REPEAT] during playback.

Each time the button is pressed, the repeat mode will be changed as follows.

- ↺ 1 (1 REP.):
Repeat of file being played
- ↺ All (ALL REP.):
Repeat all files
- ↺ Off:
Normal playback mode

Note:

Repeat playback may not work correctly with some discs.

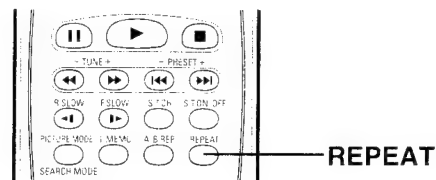

TVGuardian® OPERATION

Before Setting

- Initial setting is "CC2" on this unit.
- Please set "CC2" or "C2" (Closed caption channel 2) on your TV first. (For more details, please refer to the instruction manual of your TV.)
- Set the subtitle language to "Off". (See page E25.)

Setting TVGuardian®

Example:

To set "TV Mode Strict", "TVG CC On" and "TVG CC Ch CC2"

- Press [SETUP] in the stop mode.
The setup screen appears.
- Press [▶] to select "Parental".
- Press [ENTER].
"Parental" screen appears.
- Press [▼] to select "TVG Mode".
Note:
If the parental lock "🔒" is set, the highlighted box does not move. **You must enter the password to release the parental lock first.** See page E33.
- Press [ENTER].
The submenu ("Off", "Moderate" and "Strict") appears.
- Press [▼] to select "Strict".

Password	----	🔒
Level	Off	
TVG Mode	Off	Off
TVG CC	Off	Moderate
TVG CC Ch	CC2	Strict

Note:

If "TVG Mode" is not necessary, select "Off".


- Press [ENTER].
"TVG Mode Strict" remains.
- Press [▼] to select "TVG CC (Closed Caption)".
- Press [ENTER].
The submenu ("Off", "CUSS" and "On") appears.
- Press [▼] to select "On".

Password	----	🔒
Level	Off	
TVG Mode	Strict	
TVG CC	Off	Off
TVG CC Ch	CC2	CUSS
		On

Note:

If "TVG CC Off" is selected, closed caption may not appear at CC2 mode on your TV screen.

In this instruction manual, the language in on-screen display is English. If you change the language (see page E31), please follow the selected language in on-screen display.

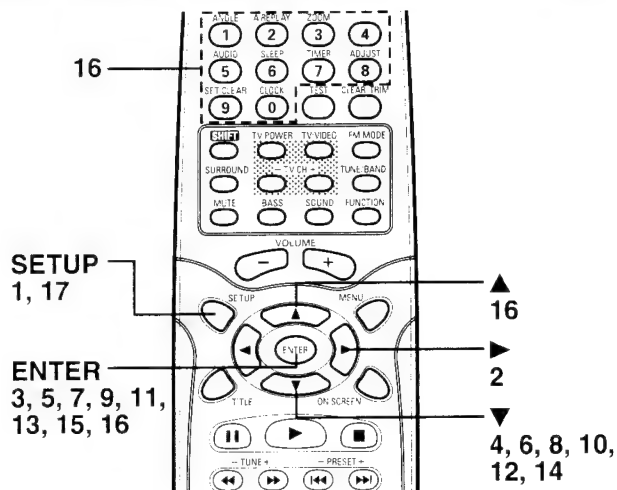

- Press [ENTER].
"TVG CC On" remains.
- Press [▼] to select "TVG CC Ch (Output Channel)".
- Press [ENTER].
The submenu ("CC1" and "CC2") appears.
- Press [▼] to select "CC2".

Password	----	🔒
Level	Off	
TVG Mode	Strict	
TVG CC	On	
TVG CC Ch	CC2	CC1
		CC2

Note:

This is channel number setting for your TV. For more details, please refer to the instruction manual of your TV.

- Press [ENTER].
"TVG CC Ch CC2" remains.
- After step 15, you must set the parental lock as shown below.**
(For more details, please refer to "Setting Parental" on page E33.)
 - Press [▲] to select "Level".
 - Press [ENTER] repeatedly to select the parental lock level.
 - Press [▲] to select "Password ----".
 - Enter a number in 4 digits.
 - Press [ENTER].
"🔒" appears.

Note:

If you do not set it, the TVGuardian does not work, and it returns to the initial settings.

- Press [SETUP].
The setup screen disappears.

How It Works After Setting TVGuardian®:

When a disc supporting closed caption is played, it mutes the entire phrase instead of just the swear word and displays the modified text, by design. It turns the sound back on when the phrase is completed.

Examples:

The phrase "Get the hell out.", is muted and "Get Out.", is displayed.

The phrase "Move you're a—!", is muted and "Move your tail!", is displayed.

IMPORTANT INFORMATION:

- Use a TV with closed caption capability and set the function to "On".
- Set the same channel number on your TV as above.
- The built-in TVGuardian® Foul Language Filter (TVG®) works only English language DVD video disc supporting closed caption, not any other languages.
- **For improvement, on-screen displays subject to change without notice.**

Setting TVGuardian			Operation (TV: CC2 or C2)	
TVG Mode	TVG CC	TVG CC Ch	Sound	Closed Caption
Off		CC2	Original sound	No display
Moderate	Off	CC2	Mute the swear word	No display
	CUSS	CC2	Mute the swear word	Display the modified text only
	On	CC2	Mute the swear word	Display all text with the modified text
Strict	Off	CC2	Mute the swear word	No display
	CUSS	CC2	Mute the swear word	Display the modified text only
	On	CC2	Mute the swear word	Display all text with the modified text

Setting TVGuardian			Operation (TV: CC1 or C1)	
TVG Mode	TVG CC	TVG CC Ch	Sound	Closed Caption
Off		CC2	Original sound	Original text
Moderate	Off	CC2	Mute the swear word	No display
	CUSS	CC2	Mute the swear word	No display
	On	CC2	Mute the swear word	No display
Strict	Off	CC2	Mute the swear word	No display
	CUSS	CC2	Mute the swear word	No display
	On	CC2	Mute the swear word	No display

Notes:

- Foul word that are normally filtered are missed when closed-captioning errors exist (i.e. a foul word is not captioned, misspelled or is not synchronized with the spoken word.)
- The built-in Foul Language Filter may not work on some discs depending on recording conditions.
- DVD video discs may or may not respond to the TVG Mode settings. Make sure this function works with your DVD video discs.
- When playback starts, the TVG information may appear on the TV screen.

- If you want to see the closed caption when "TVG Mode" is set to "Off", set "TVG CC Ch" to "CC1".
- If you want to see the closed caption when "Moderate" and "Strict" are set, set the same channel as TVG CC Ch's number ("CC2" or "CC1").

TVGuardian® and TVG® are registered trademarks of Principle Solutions, Inc.



**Need help? Call
1-800-421-5013**

INITIAL SETTINGS

Once the initial settings have been completed, the unit can always be operated under the same conditions. The settings will be retained in the memory until they are changed, even if the power is turned off.

Notes:

- In this instruction manual, the language in on-screen display is English. If you change the language, please follow the selected language in on-screen display.
- You cannot switch audio sound track languages if there is only one language recorded on the disc.
- When you play back a DVD video disc, the unit automatically displays the pre-selected subtitle language if it is included on the disc.
- If "Others" is selected, enter the language code. (See "LANGUAGE CODE LIST" on page E34.)
- For improvement, on-screen displays subject to change without notice.

Setting Language

1. Press [SETUP] in the stop mode.
The setup screen appears.
"Language" is highlighted.
2. Press [ENTER].
"Language" screen appears.
3. Press [▼] or [▲] to select the item (highlighted).
Example:

OSD	English
Audio	Disc
Subtitle	Disc
DVD Menu	Disc
4. Press [ENTER].
The submenu appears.
Example:

OSD	English	English
Audio	Disc	Español
Subtitle	Disc	Français
DVD Menu	Disc	Deutsch
		Portugues
5. Press [▼] or [▲] to select the language (highlighted).
6. Press [ENTER].
The selected language remains.
7. Repeat steps 3 and 6 for other items.
Note:
If "Others" is selected, enter the language code. (See "LANGUAGE CODE LIST" on page E34.)
8. Press [▲] to skip back to the setup screen (or press [SETUP]).

Setting Display

1. Press [SETUP] in the stop mode.
The setup screen appears.
2. Press [►] to select "Display".
3. Press [ENTER].
"Display" screen appears.
4. Press [ENTER].
The submenu ("4:3 LB", "4:3 PS" and "16:9") appears.
5. Press [▼] or [▲] to select the appropriate setting for your TV screen size.
Example: To select "4:3 PS"

TV Type	4:3 LB	4:3 LB
		4:3 PS
		16:9
6. Press [ENTER].
Example:

TV Type	4:3 PS
---------	--------
7. Press [▲] to skip back to the setup screen (or press [SETUP]).


4:3 LB (Letterbox):

Select when a conventional TV set is connected.
When the wide screen disc is played back, the black bands appear at the top and bottom of screen.



4:3 PS (Panscan):


Select when a conventional TV set is connected.
When the wide screen disc is played back, it displays pictures cropped to fill to your TV screen. The left and right edges are cut off.

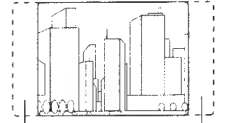

Cut off Cut off

16:9 :

 Select when a wide screen TV set is connected.
Played in "FULL" size. (Setting the wide screen TV to "FULL" mode is also necessary.)



Notes:

- The screen size may differ depending on the DVD video discs.
- If you select 16:9 to get rid of the black bands on screen when wide screen disc is played back, picture may be slightly distorted.
- In some discs, even if 4:3 PS is selected, the black bands may remain on the screen.

Setting Audio

The sound from speakers can reach the listening position at different times depending the speaker placements. You can allow for this difference by changing the delay time of the center and surround speakers.

You also can change the Dynamic Range Control (DRC).

1. Press [SETUP] in the stop mode.
The setup screen appears.

2. Press [▶] to select "Audio".

3. Press [ENTER].
"Audio" screen appears.

Audio DRC	Off
Center Delay	0ms
Surr. Delay	5ms


4. Press [ENTER] to select "Audio DRC".
The submenu ("On" and "Off") appears.
5. Press [▼] or [▲] to select "On" or "Off" as desired.
On: It will compress the dynamic range. It may have no effect with some discs.
Off: Sound with a wide dynamic range.
6. Press [ENTER].
"Audio DRC On" or "Audio DRC Off" remains.
7. Press [▼] to select "Center Delay".
8. Press [ENTER].
The submenu ("0ms", "1ms", "2ms", "3ms", "4ms" and "5ms") appears.
9. Press [▼] or [▲] to select the center speaker delay time.

Center speaker delay time


If $D1 \leq D2$, set the delay time to "0ms".

If $D1 > D2$, set the delay time as follows:

Difference between D1 and D2	Delay time
1 foot (Approx. 30.5cm)	1ms
2 feet (Approx. 61cm)	2ms
3 feet (Approx. 91.5cm)	3ms
4 feet (Approx. 122cm)	4ms
5 feet (Approx. 152.5cm)	5ms

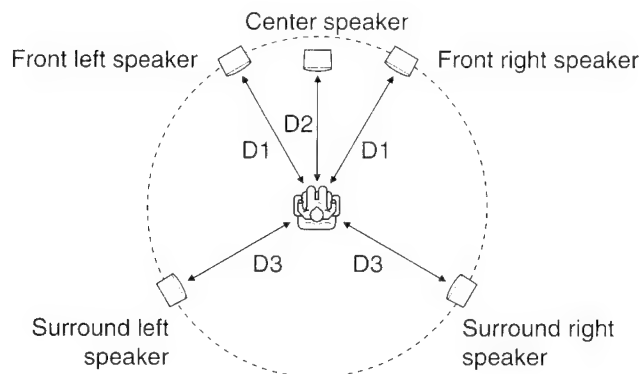

D1: The distance from the front speaker
D2: The distance from the center speaker
D3: The distance from the surround speaker

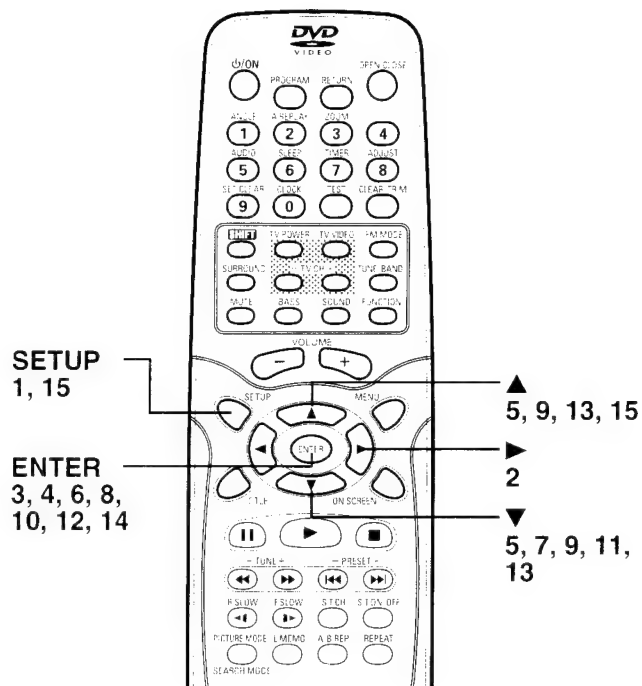

10. Press [ENTER].
"Center Delay" and the selected delay time remain.
11. Press [▼] to select "Surr. Delay".
12. Press [ENTER].
The submenu ("0ms", "5ms", "10ms" and "15ms") appears.
13. Press [▼] or [▲] to select the surround speaker delay time.

Surround speaker delay time

If $D1 \leq D3$, set the delay time to "0ms".

If $D1 > D3$, set the delay time as follows:

Difference between D1 and D3	Delay time
5 feet (Approx. 152.5cm)	5ms
10 feet (Approx. 305cm)	10ms
15 feet (Approx. 457.5cm)	15ms

14. Press [ENTER].
"Surr. Delay" and the selected delay time remain.
15. Press [▲] to skip back to the setup screen (or press [SETUP]).




Need help? Call
1-800-421-5013

Setting Parental


Note:

If you set "TVG Mode", "TVG CC" or "TVG CC Ch", set them first before steps 6 and 7. See "SETTING TVGuardian®" on page E29.

1. Press [SETUP] in the stop mode.
The setup screen appears.
2. Press [▶] to select "Parental".
3. Press [ENTER].
"Parental" screen appears.
4. Press [▼] to skip "Password ----" and select "Level".

Password	----	
Level	Off	
TVG Mode	Off	
TVG CC	Off	
TVG CC Ch	CC2	


5. Press [ENTER] repeatedly to select the parental lock level ("Level Off" ~ "Level 8").
6. Press [▲] to return to "Password ----".
7. Enter a number in 4 digits, then press [ENTER].
The password is now set.

Password	----	
Level	1	
TVG Mode	Off	
TVG CC	Off	
TVG CC Ch	CC2	

Note:

If you do not set it, Parental Control does not work, and it returns to the initial settings.

8. Press [SETUP].
The setup screen disappears.

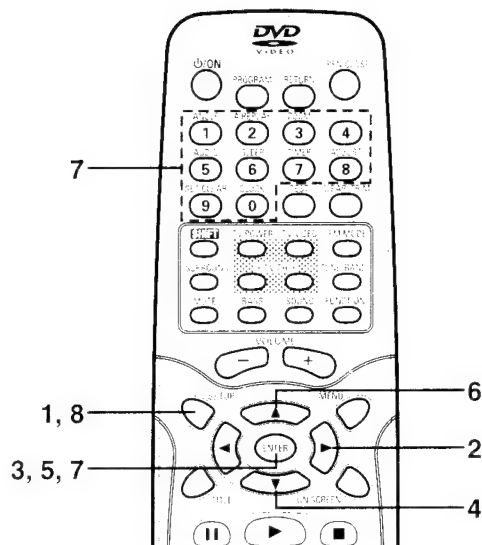

Parental Control

MPAA (Motion Picture Association of America) Guideline is a rating system that provides advanced cautionary information to parent about the content of movie programs.

The parental lock level is equivalent to the following MPAA Rating System.

Level 7: NC-17 (No one 17 and under admitted)
Level 6: R (Restricted)
Level 4: PG13 (Parental guidance cautioned)
Level 3: PG (Parental guidance suggested)
Level 1: G (General audiences)

Some DVD discs contain a restriction level which enables parents to prevent playback of discs by children. This DVD video player is equipped with a password designed to prevent children changing the level.

You cannot play DVD video discs rated higher than the level you selected unless you cancel the parental lock function. For example, when you select level "5", the DVD video player will not play discs with ratings of "6", "7" or "8". The information will appear on the TV screen.

If you forget the password...

Enter "788444" even if 4 digits "----" appears, then press [ENTER] to clear the current password.

Enter a new password and set the parental lock level again.

Note:

DVD video discs may or may not respond to the parental lock settings. Make sure this function works with your DVD video discs.

To lock the disc tray

You can lock the disc tray to prevent misuse of young children. While the disc tray is opened, press the ▲ button on the unit until "LOCKED" appears on the FL display (or "Disc Tray Locked" appears on the TV screen). (The disc tray closes.)

- The ▲ button (or the OPEN/CLOSE button) will not function. To release this mode, press the ▲ button on the unit until "UNLOCKED" appears on the FL display (or "Disc Tray Unlocked" appears on the TV screen).



Need help? Call
1-800-421-5013

LANGUAGE CODE LIST

Enter the appropriate code number for the initial settings "Audio", "Subtitle" and "DVD Menu".

Code	Abbreviation of the language	Language	Code	Abbreviation of the language	Language	Code	Abbreviation of the language	Language
6565	aa	Afar	7369	ie	Interlingue	8278	rn	Kirundi
6566	ab	Abkhazian	7375	ik	Inupiak	8279	ro	Romanian
6570	af	Afrikaans	7378	in	Indonesian	8285	ru	Russian
6577	am	Amharic	7383	is	Icelandic	8287	rw	Kinyarwanda
6582	ar	Arabic	7384	it	Italian	8365	sa	Sanskrit
6583	as	Assamese	7387	iw	Hebrew	8368	sd	Sindhi
6589	ay	Aymara	7465	ja	Japanese	8371	sg	Sangro
6590	az	Azerbaijani	7473	ji	Yiddish	8372	sh	Serbo-Croatian
6665	ba	Bashkir	7487	jw	Javanese	8373	si	Singhalese
6669	be	Byelorussian	7565	ka	Georgian	8375	sk	Slovak
6671	bg	Bulgarian	7575	kk	Kazakh	8376	sl	Slovenian
6672	bh	Bihari	7576	kl	Greenlandic	8377	sm	Samoan
6673	bi	Bislama	7577	km	Cambodian	8378	sn	Shona
6678	bn	Bengali; Bangla	7578	kn	Kannada	8379	so	Somali
6679	bo	Tibetan	7579	ko	Korean	8381	sq	Albanian
6682	br	Breton	7583	ks	Kashmiri	8382	sr	Serbian
6765	ca	Catalan	7585	ku	Kurdish	8383	ss	Siswati
6779	co	Corsican	7589	ky	Kirghiz	8384	st	Sesotho
6783	cs	Czech	7665	la	Latin	8385	su	Sundanese
6789	cy	Welsh	7678	ln	Lingala	8386	sv	Swedish
6865	da	Danish	7679	lo	Laothian	8387	sw	Swahili
6869	de	German	7684	lt	Lithuanian	8465	ta	Tamil
6890	dz	Bhutani	7686	lv	Latvian, Lettish	8469	te	Telugu
6976	el	Greek	7771	mg	Malagasy	8471	tg	Tajik
6978	en	English	7773	mi	Maori	8472	th	Thai
6979	eo	Esperanto	7775	mk	Macedonian	8473	ti	Tigrinya
6983	es	Spanish	7776	ml	Malayalam	8475	tk	Turkmen
6984	et	Estonian	7778	mn	Mongolian	8476	tl	Tagalog
6985	eu	Basque	7779	mo	Moldavian	8478	tn	Setswana
7065	fa	Persian	7782	mr	Marathi	8479	to	Tonga
7073	fi	Finnish	7783	ms	Malay	8482	tr	Turkish
7074	fj	Fiji	7784	mt	Maltese	8483	ts	Tsonga
7079	fo	Faeroese	7789	my	Burmese	8484	tt	Tatar
7082	fr	French	7865	na	Nauru	8487	tw	Twi
7089	fy	Frisian	7869	ne	Nepali	8575	uk	Ukrainian
7165	ga	Irish	7876	nl	Dutch	8582	ur	Urdu
7168	gd	Scots Gaelic	7879	no	Norwegian	8590	uz	Uzbek
7176	gl	Galician	7967	oc	Occitan	8673	vi	Vietnamese
7178	gn	Guarani	7977	om	(Afan) Oromo	8679	vo	Volapük
7185	gu	Gujarati	7982	or	Oriya	8779	wo	Wolof
7265	ha	Hausa	8065	pa	Punjabi	8872	xh	Xhosa
7273	hi	Hindi	8076	pl	Polish	8979	yo	Yoruba
7282	hr	Croatian	8083	ps	Pashto, Pushto	9072	zh	Chinese
7285	hu	Hungarian	8084	pt	Portuguese	9085	zu	Zulu
7289	hy	Armenian	8185	qu	Quechua			
7365	ia	Interlingua	8277	rm	Rhaeto-Romance			

ENJOYING VIDEO SOURCES

1. Press [FUNCTION] to select "VIDEO 1" or "VIDEO 2".

2. Follow the instructions supplied with TV or other compatible/ video component.

LISTENING TO THE RADIO

To turn the unit on and listen to the last received station, press [TUNE/BAND] on the remote control.

Automatic/Manual Tuning


1. Press [TUNE/BAND] to select FM or AM.

2. Automatic tuning

Press [TUNE +] or [- TUNE] for at least 1 second to tune in a station. The unit will scan up or down the band and receive the next receivable station. Press the button again to continue.

Manual tuning

Press [TUNE +] or [- TUNE] briefly until the desired frequency is displayed. The frequency changes in 200 kHz steps for FM and 10 kHz steps for AM.

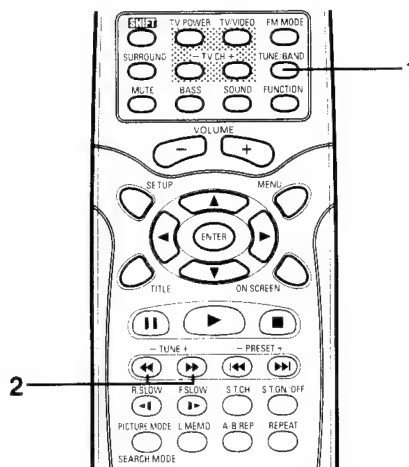

To Preset Stations

Up to 24 FM and 12 AM stations can be preset.

Automatic presetting (APT)

1. Press [TUNE/BAND] to select FM or AM.

2. Press [PROGRAM] for at least 3 seconds. "PROG." blinks.


The automatic tuning mode is set and automatic presetting begins from the low end of the band.

When 24 FM or 12 AM stations have been preset or the high end of the band is reached, automatic presetting stops. "PROG." disappears and the station memorized on channel 1 will be heard.

3. To preset stations on the other band, follow steps above.

Note:

If APT is activated, all previously programmed stations of the band will be cleared and new stations will be programmed.

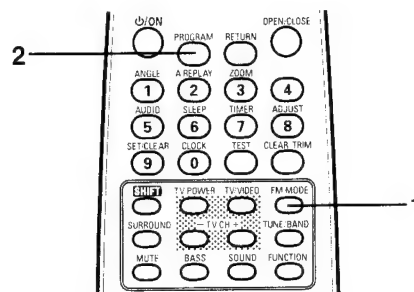


**Need help? Call
1-800-421-5013**

To receive FM stereo broadcasts

Make sure that "MONO" is not displayed. If "MONO" appears, press [FM MODE] to turn the "MONO" indication off.

"ST" appears when an FM stereo broadcast is received.


- If the signal from an FM stereo station is weak and reception is poor, press [FM MODE] to change to monaural reception. The reception may be improved, but the sound will be monaural.

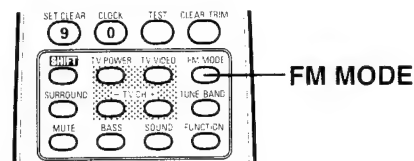

Manual presetting

1. Tune in the station to be preset as described in "Automatic/Manual Tuning".

 2. Press [PROGRAM].
"PROG." blinks.




3. While "PROG." is blinking, press [PRESET +] or [- PRESET] to select the channel to be preset.

- The number buttons on the remote control can also be used.
- In this example, the channel is "9".




4. While "PROG." is blinking, press [ENTER].

 - In this example, "103.1 MHz" FM station is preset on FM channel 9.



5. Repeat steps above to add more preset stations.

- When presetting a new station, the previous preset station is cleared.

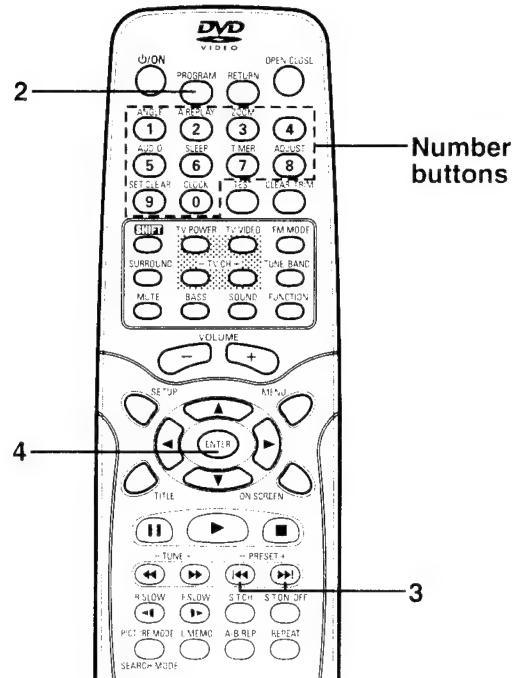

Listening to Preset Stations

Preset tuning

- Press [TUNE/BAND] to select FM or AM.
- Press [PRESET +] or [- PRESET] briefly to select the desired channel.
 - If using the number buttons, press the number button(s), then press [ENTER].


Preset scan tuning

- Press [TUNE/BAND] to select FM or AM.
- Press [PRESET +] for at least 1 second.
 - The channel number appears.
 - The preset stations are selected in sequence for approximately five seconds each.
- Press [PRESET +] when the desired station has been selected. Preset scanning will stop.

When beat interference is heard

A high-pitched noise called "beat" is sometimes heard during reception of radio broadcasts.

If this occurs, while holding [■] down on the front panel, press [TEST] on the remote control to select "bc-A" or "bc-B". Select the setting that gives the best results.

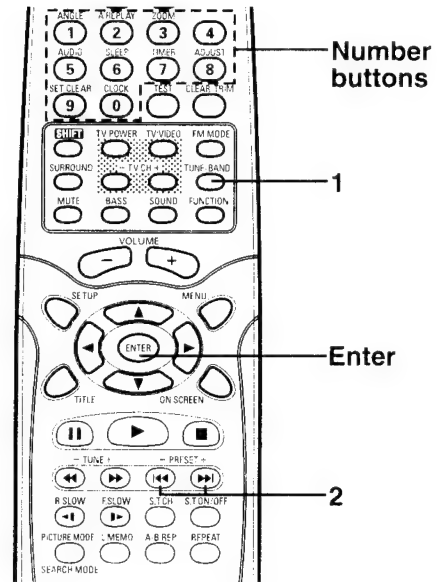

Changing the reception frequencies

It is not necessary to perform this procedure in the U.S. and Canada.

- Select the band to be changed.
- While holding [■] down on the front panel, press [PROGRAM] on the remote control.
To return the original setting, repeat steps above.

AM: 520 ~ 1710 kHz (10 kHz steps)

522 ~ 1710 kHz (9 kHz steps)

FM: 87.9 ~ 107.9 MHz (200 kHz steps)

87.5 ~ 108.0 MHz (50 kHz steps)

TIMER OPERATION

Before setting the timer, make sure that the clock is set to the present time. See "ADJUSTING THE CLOCK".

Using the Wake Up Timer

Set the on and off times, function to be used and volume level. Operation will start with the selected function at the on time. The sound will be gradually increased from a no-sound level to the volume setting (fade-in). The power will be turned off at the off time.

 
The timer will function every day unless it is released.

Preparation

- Select the source for timer operation and prepare the sources to be used.
- If the tuner is selected, tune in to the desired band and station.
- Adjust the volume level as desired.


Operation

1. Press [TIMER] while holding [SHIFT] down.




The previous timer on time setting appears.

 
2. Press [ADJUST] while holding [SHIFT] down within 10 seconds.



 3. Set the hours of timer on time by pressing [◀◀] or [▶▶], then press [ADJUST] while holding [SHIFT] down.



Set the minutes in the same way.

 

The timer off time setting appears.

4. Set the timer off time as described in step 3. The original display returns, then the timer operation standby mode is activated. "⌚" remains lit.



5. Press [⏻/ON] to turn off the power. The STANDBY indicator lights.

When the timer ON time arrives, the power is turned on automatically.

- "⌚" blinks while timer operation is engaged.
- When the timer OFF time arrives, the power turns off and the timer is set to the standby mode. Timer operation repeats this cycle every day.
- If [⏻/ON] is pressed during timer operation, the power is turned off and the timer is set to the standby mode.



Need help? Call
1-800-421-5013

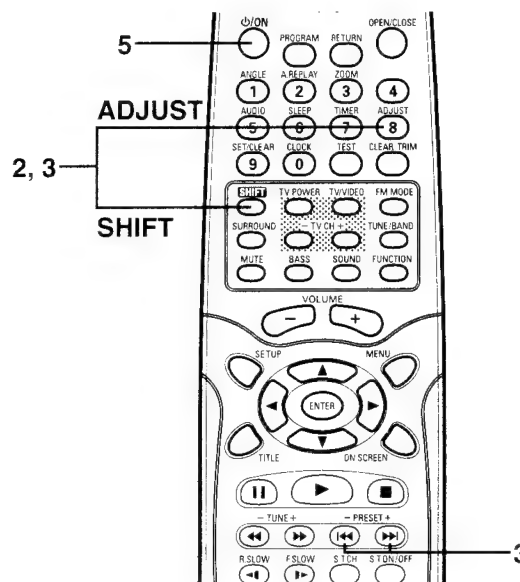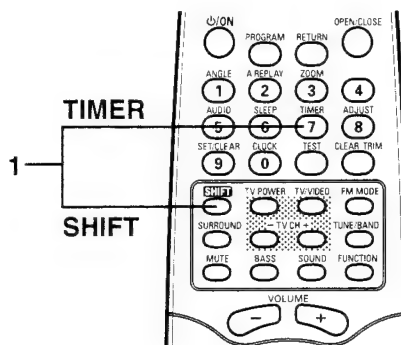

To check the timer settings

Press [TIMER] repeatedly while holding [SHIFT] down. The timer settings are displayed in the following order:

On time → Off time → Function → Original display returns

To change the timer settings

1. Press [TIMER] while holding [SHIFT] down to select the setting to be changed.
2. Press [ADJUST] while holding [SHIFT] down so that the display blinks.
3. Change the setting as explained above.

To release the timer


1. After turning the power on, press [TIMER] while holding [SHIFT] down. "ON" appears.
2. Press [SET/CLEAR] while holding [SHIFT] down. "ON" disappears.

To set the timer again with the same settings

1. Press [TIMER] while holding [SHIFT] down. "ON" appears.
2. Press [SET/CLEAR] while holding [SHIFT] down. "ON" remains lit.
3. Press [1/ON] to turn off the power.

Notes:

- If [SET/CLEAR] is pressed while holding [SHIFT] down, while the timer is being set, the original display returns.
- The timer mode is released if a power failure occurs during timer controlled operation.
- The timer may not operate if a power failure occurs during timer operation standby mode.

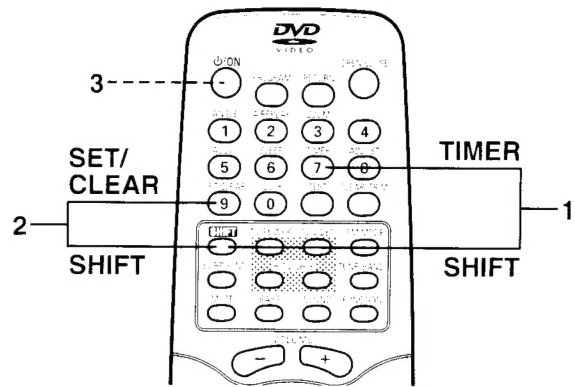

Using the Sleep Timer

The sleep timer automatically switches off the power after a preset time has elapsed. The volume will gradually be reduced (fade-out) during the 1 minute period before the unit turns off. There are 4 time periods available: 30, 60, 90, and 120 minutes.

Press [SLEEP] repeatedly while holding [SHIFT] down to select the desired sleep time. "SLEEP" and the selected time blink on the display.

After several seconds, the original display returns and the brightness of the display reduces. "SLEEP" blinks.

To check the remaining sleep time


Press [SLEEP] once while holding [SHIFT] down. The remaining time is displayed.

After several seconds, the original display returns.

To release the sleep timer while in operation

Press [SLEEP] repeatedly while holding [SHIFT] down until "SLEPOFF" appears.

The timer is also released if the power is switched off.

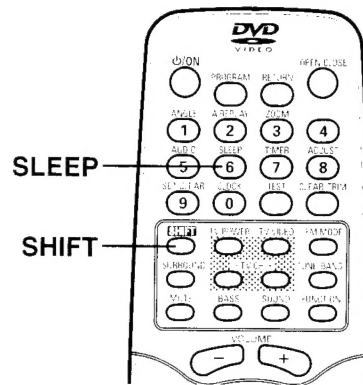

**Need help? Call
1-800-421-5013**

MAINTENANCE

WARNING:

 
FOR YOUR PERSONAL SAFETY, BE SURE TO DISCONNECT THE AC POWER CORD BEFORE PROCEEDING WITH ANY MAINTENANCE OR CLEANING.

Cleaning the cabinet

Use a clean soft cloth moistened with plain lukewarm water and wrung dry. Never use benzol, benzene or other strong chemical cleaners since these could damage the finish of your unit. It is important that no liquid reaches the inside of the unit.

TROUBLESHOOTING GUIDE

If you have followed the instructions and are having difficulty operation the unit, locate the SYMPTOM in the left column below. Check the corresponding POSSIBLE CAUSE and CORRECTIVE ACTION columns to locate and remedy the problem.

SYMPTOM	POSSIBLE CAUSE	CORRECTIVE ACTION
No power.	No power plug connection at the AC wall outlet.	Insert the power plug into the AC wall outlet.
The power is on, but the player does not work.	No disc is loaded.	Load a disc.
No picture.	An unplayable disc is loaded.	Load a playable disc. (Check the disc logo, type, color system and Regional code.)
	The TV is not set to receive signal from the unit.	Select the correct input function on the TV.
	The video cable is not connected.	Connect the video cable into the jack.
No sound.	Volume control is set to minimum.	Turn up the volume.
	The wrong function is selected.	Select the correct function.
	Faulty speaker connections.	Connect the speaker wires firmly to the speaker terminals.
Sound is heard from only one speaker.	Faulty connection of speaker wires.	Connect the speaker wires firmly to the speaker terminals.
The playback picture is poor.	An unplayable disc is loaded.	Load a playable disc. (Check the disc logo, type, color system, and regional code.)
Part of On-Screen-Display is cut off.	Incorrect aspect ratio setup on TV.	Refer to the instruction manual of your TV.
"⊘" appears on the TV screen.	The selected function does not operate on the disc now.	The feature or action cannot be completed at this time because: <ul style="list-style-type: none"> • The feature is not available at the moment. • The DVD software restricts it. • The DVD software doesn't support the feature (e.g., angles).
The player does not start playback.	No disc is loaded.	Load a disc.
	An unplayable disc is loaded.	Load a playable disc. (Check the disc logo, type, color system, and regional code.)
	The disc is loaded with the label side down.	Load the disc on the disc tray correctly.
	The disc is dirty.	Clean the disc or replace it.
	"Parental" is set.	Cancel the parental lock function or change the rating level. Reset it after play. (See Page E33.)
The disc tray does not open.	The disc tray may be locked.	Press the  button on the unit until "UNLOCKED" appears on the FL display. (See page E33.)
The operation or display is not normal.	The unit must be reset.	<ol style="list-style-type: none"> 1. Disconnect the power cord. 2. Press the RESET button (bottom of the unit). (See Page E3.)
Flickering "ST".	Weak signal.	Reorient the FM antenna lead wire or install an outdoor FM antenna.
The remote control does not work properly.	The batteries in the remote control are weak, or installed incorrectly.	Check the battery polarity (+ or -). Replace the batteries.
	The remote control is not aimed at the remote sensor window.	Aim the remote control at the remote sensor window.

SERVICING:

Should this product require service, refer to the FISHER AUDIO/VIDEO limited warranty.

If you do not have a convenient FISHER service station nearby, contact the FISHER dealer where you purchased the unit. Be sure to give the model number and explain the problem. The dealer will advise you how to obtain service.

SPECIFICATIONS

Amplifier Section

Main Amplifier (Stereo mode)

Continuous minimum sine wave RMS power output per channel into 8 ohms at 1kHz with no more than 10% total harmonic distortion 25 Watts

Main Amplifier (Dolby Digital mode)

Continuous minimum sine wave RMS power output per channel into 8 ohms at 1kHz with no more than 10% total harmonic distortion (with Center/Surround amplifier off) 25 Watts

Center Channel Amplifier (Center)

Continuous minimum sine wave RMS power output into 8 ohms at 1kHz with no more than 10% total harmonic distortion (with Main/Surround amplifier off) 25 Watts

Surround Channel Amplifier (Surround)

Continuous minimum sine wave RMS power output per channel into 8 ohms at 1kHz with no more than 10% total harmonic distortion (with Main/Center amplifier off) 25 Watts

Inputs:

VIDEO (AUDIO) IN 1: 500 mV/50 k Ω

VIDEO (AUDIO) IN 2: 500 mV/50 k Ω

Outputs:

FRONT SPEAKERS (L/R): 8 Ω

CENTER SPEAKER: 8 Ω

SURROUND SPEAKERS (L/R): 8 Ω

SUBWOOFER PRE OUT: 2 V/1 k Ω

COMPONENT VIDEO OUT:

Y: 1.0 Vp-p (75 Ω)

Cb: 0.7 Vp-p (75 Ω)

Cr: 0.7 Vp-p (75 Ω)

MONITOR OUT S-VIDEO:

Y: 1.0 Vp-p (75 Ω)

C: 0.286 Vp-p (75 Ω)

MONITOR OUT VIDEO: 1.0 Vp-p (75 Ω)

DVD Video Player Section

Type:

DVD Video player

Signal format:

NTSC color

Laser:

Semiconductor laser, wavelength 650 nm/790 nm

Signal to noise ratio:

More than 105 dB

Wow and flutter:

Below measurable level

Tuner Section

(FM)

Frequency range:

87.9 MHz ~ 107.9 MHz (200 kHz steps)

Usable sensitivity:

20.2 dBf (mono)

(AM)

Frequency range:

520 kHz ~ 1,710 kHz (10 kHz steps)

Usable sensitivity:

500 μ V/m (AM loop antenna)

General

Power requirements:

AC 120V, 60Hz

Power consumption:

110 Watts

Dimensions (W x H x D):

Approx. 17.1" x 3" x 14.8" (435 x 75 x 375 mm)

Weight:

Approx. 14.1 lbs (6.4 kg)

Satellite Speaker

Front left, Front right, Center, Surround left, and Surround right speakers (STM-8501S, magnetic shield)

Unit used:

3.1" (8 cm) diameter, Cone type, Full range

Maximum music power handling capacity:

60 Watts

Nominal impedance:

8 Ω

Dimensions (W x H x D):

Approx. 5.9" x 4.3" x 4.5" (150 x 110 x 115 mm)

Weight:

Approx. 1.6 lbs (0.73 kg)/speaker

Active Subwoofer (STM-T750W)

Continuous minimum sine wave RMS power output into 4 ohms at 70Hz with no more than 10% total harmonic distortion 75 Watts

AUDIO INPUT:

0.75 V/15 k Ω

Power requirements:

AC 120V, 60Hz

Power consumption:

125 Watts

Unit used:

5.1" (13 cm) diameter, Cone type

Dimensions (W x H x D):

Approx. 6.3" x 16.3" x 12.2" (160 x 415 x 310 mm)

Weight:

Approx. 15.5 lbs (7 kg)

IMPORTANT INFORMATION

Because its products are subject to continuous improvement, Fisher reserves the right to modify product designs and specifications without notice and without incurring any obligation.

**FISHER AUDIO/VIDEO
MODEL DCS-TS750 LIMITED WARRANTY**

OBLIGATIONS

In order to obtain warranty service, the product must be delivered to and picked up from an Authorized Fisher Factory Service Center at the user's expense, unless specifically stated otherwise in this warranty. The names and addresses of Authorized Fisher Service Centers may be obtained by calling the toll-free number listed below.

For product operation, authorized service center referral, service assistance or problem resolution, call

CUSTOMER INFORMATION 1-800-421-5013
Weekdays 8:00 AM - 5:00 PM Pacific Time

For accessories and/or parts not available from an authorized dealer, call

PARTS ORDER INFORMATION 1-800-726-9662
Weekdays 8:00 AM - 5:00 PM Pacific Time

THIS WARRANTY IS VALID ONLY ON FISHER PRODUCTS PURCHASED OR RENTED AND USED IN THE UNITED STATES OF AMERICA. THIS WARRANTY APPLIES ONLY TO THE ORIGINAL RETAIL USER, AND DOES NOT APPLY TO PRODUCTS USED FOR ANY INDUSTRIAL, PROFESSIONAL OR COMMERCIAL PURPOSE. THE ORIGINAL DATED BILL OF SALE, SALES SLIP OR RENTAL AGREEMENT MUST BE SUBMITTED TO THE AUTHORIZED FISHER SERVICE CENTER AT THE TIME WARRANTY SERVICE IS REQUESTED.

Subject to the OBLIGATIONS above and EXCLUSIONS below, SANYO FISHER COMPANY (SFC) warrants this FISHER product against defects in materials and workmanship for the periods of LABOR and PARTS specified below. SFC will repair or replace (at its option) the product and any of its parts which fail to conform to this warranty. The warranty period commences on the date the product was first purchased or rented at retail.

LABOR	PARTS
1 YEAR	1 YEAR

EXCLUSIONS

This warranty does not cover (A) the adjustment of customer-operated controls as explained in the appropriate model's instruction manual, or (B) the repair of any product whose serial number has been altered, defaced or removed.

This warranty shall not apply to the cabinet or cosmetic parts, knobs or routine maintenance.

This warranty does not apply to uncrating, setup, installation, removal of the product for repair or reinstallation of the product after repair.

This warranty does not apply to repairs or replacements necessitated by any cause beyond the control of SFC including, but not limited to, any malfunction, defect or failure caused by or resulting from unauthorized service or parts, improper maintenance, operation contrary to furnished instructions, shipping or transit accidents, modification or repair by the user, abuse, misuse, neglect, accident, incorrect power line voltage, fire, flood or other Acts of God, or normal wear and tear. The foregoing is in lieu of all other expressed warranties and SFC does not assume or authorize any party to assume for it any other obligation or liability.

THE DURATION OF ANY WARRANTIES WHICH MAY BE IMPLIED BY LAW (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS) IS LIMITED TO THE TERM OF THIS WARRANTY. IN NO EVENT SHALL SFC BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM OWNERSHIP OR USE OF THIS PRODUCT, OR FOR ANY DELAY IN THE PERFORMANCE OF ITS OBLIGATIONS UNDER THIS WARRANTY DUE TO CAUSES BEYOND ITS CONTROL.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OR LIMITATION OF CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

F/A R11 (M)

For your protection in the event of theft or loss of this product, please fill in the information below for your own personal records.

Model No. _____

Serial No. _____

(Located on back or bottom side of unit)

Date of Purchase _____

Purchase Price _____

Where Purchased _____